

IMPORTANT

ALWAYS FURNISH APPROPRIATE PATENT PLATE INFORMATION AND DSO NUMBER
IF APPLICABLE WHEN ORDERING PARTS NOT LISTED IN THE CATALOG.

INDEX

BELOW IS A LIST OF THE MAJOR GROUPS AND THE ORDER IN WHICH THEY ARE LISTED IN THIS INDEX.

BACK	DOOR - REAR	LUGGAGE COMPARTMENT	SEAT - AUXILIARY
BODY ASSEMBLY	FLOOR	PACKAGE TRAY	SEAT - FRONT
BODY SIDE	FRONT	CENTER PILLAR	SEAT - REAR
CONSOLE PANEL	GLOVE COMPARTMENT	QUARTER	TOP - FOLDING
DOOR - FRONT	INSTRUMENT PANEL	ROOF	WINDSHIELD

BACK

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Adjustor (door lock actuating rod)	21816	Cover set (cargo floor complete)	60925
Anti-rattler assy. (tail gate support)-on pillar	44454	Cylinder assy.(tail gate or back door lock)-with keys	43505
Anti-rattler (tail gate lock release)	431C70		431C50
Anti-rattler (tail gate torsion bar)	45028		43279
Anti-squeak (rear corner pillar)	41078	Door assy. (lower back panel fuel filler opening)-with hinges	40628
Anti-squeak (tail gate counter balance spring)	430A12	Dovetail (rear door)-female	43190
Bar (lift gate hinge torsion)	44890-1	Dovetail (rear door)-male	5950
Bar (tail gate counter balance torsion)	43012-3	Dovetail assy. (lift gate)	431A55
Bearing and strap assy. (tail gate counter balance)	43037	Dovetail assy. (tail gate)	431A58
Bolt (tail gate outside lower moulding retainer)	425A36	Drive assy. (tail gate power-lift window regulator)	23394-5
Boot (tail gate release handle)	431D60	Escutcheon (lift gate latch)	43212-3
Brace (back panel strainer to back window frame)	40264-5	Extension (back window header)-inner rail	413A00-1
Brace (lower back panel to floor)-inner	40396-7	Extension (fuel filler housing)	405A90
Brace (lower back panel upper flange to floor)	403A40-1	Extension (rear corner inner front lower pillar)	278C80-1
Brace assy. (lower back panel to floor)-outer	403A84-5	Extension (tail gate lock cylinder)	431A66
Bracket (belt side rail to wheelhouse)	41704-5	Extension assy. (back window outside side moulding)	424A16-7
Bracket (lower back finish panel)	403C10	Extension assy. (spare wheel well panel)-lower	47020
Bracket (lower back finish panel) -side	403C12-3	Fastener ass'y. (lower back panel or tail gate outside finish rail)	50108
Bracket (tail gate counter balance spring)	430A06	Filler (lower back center panel to reinforcement)	40382
Bumper (back panel fuel filler opening lid)	28631	Filler (rear corner pillar)-upper	41050-1
Bumper (fuel filler opening lid)	40639	Filler assy. (upper back panel)	403C30-1
Bumper (luggage compartment door)	405A22	Frame (back window glass)-upper	422A06
Bumper (tail gate latch)	43634	Frame (back window)-lower side	41974-5
Bumper (tail gate or back door)	431B62-3	Frame (back window)-upper	42220
Bumper assy. (back window stop)-lower	23030	Frame (back window)-upper-outer	42214-5
Bumper assv. (tail gate on pillar)	440A06	Frame assy. (back window)	42206
Bumper assy. (tail gate support on pillar)	439A00-1	Frame ass'y. (back window)-side	42248-9
Bumper ass'y. (tail gate to pillar)	44454	Frame assy. (back window)-upper	42208
Bushing (tail gate power-lift window regulator pinion gear)	40426	Gate ass'y. (lift)	40010
	23437	Gate assy. (tail)-less holes & hinges	40709
Catch (spare tire well panel hold-down)	45844	Gear assy. (door power ventilating window regulator motor)	23626-7
Chain assy. (spare tire well panel check)	45836	Glass assy. (back window or door)	42004-6
Channel assy. (back window glass)	422A08	Glass assy. (back window or door)-side	42024-7
Clamp (back window housing drain tube)	423B12	Grille assy. (back panel side air scoop opening)	40500-1
Clip (tail gate latch release lever knob retaining)	431B72	Grille assy. (upper back panel ventilating air)	403C28
Clip (tail gate lock control link retaining)	26458-9	Gusset (lower back panel) -side	403C08-9
Clip (tail gate lock release link retaining)	431C56	Handle (rear door outside)	43400
Control assy. (tail gate lock remote)	43170	Handle & knob assy. (back window regulator)	44008
Cover (back window garnish moulding)	42456	Handle assy. (back window regulator)	44009
Cover (back window outside side moulding joint)	42460-1	Handle assy. (lift gate)	43400
Cover (rear lamp)	27972-3	Handle ass'y. (rear door outside)	26600
Cover (spare tire well panel)	47022	Handle assy. (tail gate)	43836
Cover (tail gate or back door lock access)	43114	Handle assy. (tail gate lock release)	431C62
Cover (upper back panel garnish moulding trim)	40450	Hinge (stowage compartment door-rear)	116A00-1
Cover assy. (back window regulator handle)	44028	Hinge assy. (fuel filler door)	405A08
Cover assy. (luggage compartment lock key hole)	43514		
Cover assy. (tail gate lock cylinder keyhole)	21942		
Cover assy. (tail gate panel)-inside	40704		

INDEX

BACK - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Hinge assy. (tail gate)	43000-1	Ornament (tail gate)	43500
Hinge assy. (upper back finish panel)	403A62-3	Ornament assy. (fuel filler opening lid)	405A86
	40582-3	Ornament assy. (lower back panel)	40316
Housing ass'y. (fuel tank filler pipe)	11310		
Housing assy. (fuel tank filler pipe)-center	405B12	Pad (back window regulator handle)	44011
	423A58-9	Pad (lower back panel ornament)	40371
Housing assy. (tail gate lock cylinder) -Includes attaching parts	440A34	Pad (tail gate handle)	43539
		Panel (back)-center lower	40262
Kit (tail gate window regulator drive gear)	234A24	Panel (back)-side-lower	40266-7
Knob (tail gate latch release lever)	431A76	Panel (back)-side-upper	40252-3
Latch assy. (tail gate)	43186-7	Panel (back window header)	42034
	44408	Panel (body rear side upper)	403A24-5
	40282	Panel (lower back)	40324
Letter (luggage compartment door lower back panel on spare wheel carrier)		Panel (lower back finish)	423A42-3
Lid assy. (fuel filler opening)	405A26		45106-7
Lid assv. (fuel filler opening)-with hinges	405A18	Panel (lower back panel fuel filler lid finish)	40513
	40676	Panel (lower back panel to bumper)	403B26
	40628	Panel (lower back side)	40380-1
Lid assy. (lower back panel fuel filler opening)-with hinges		Panel (rear corner inner finish)-lower	40462-3
Lift assy. (upper back finish panel)-less motor	403A52	Panel (rear corner)-outer	41230-1
Link assy. (tail gate lock release)	431A50-1	Panel (rear corner pillar venturi)-outer	41090-1
Linoleum (tail gate inside finish panel)	40726	Panel (tail gate inside panel)-linoleum	40726
		Panel (tail gate outside applique)	42588
Lock assy. (tail gate)	43150-1	Panel (tail gate outside finish)	425A34
Lock assy. (tail gate-lower)	431D88	Panel (upper back)	40314
Lock set (tail gate & glove compartment door)-with keys	43507		
		Panel and member ass'y. (lower back)	40306
Motor and bracket assy. (upper back panel lift)	46752	Panel ass'y. (back)	40300
Motor & Cover assy. (front door power ventilating window regulator gear)	23406-7	Panel assy. (back trim)-lower	40374-5
Moulding (back belt)-outside-center	423A20	Panel ass'y. (body)-lower back	40320
Moulding (back door outside belt)	40242-3	Panel assy. (fuel filler door)	405A60
Moulding (back window garnish)-lower	42305	Panel assy. (lower back applique)	40584-5
Moulding (back window garnish)-side	42416-7	Panel assy. (rear corner pillar venturi)-front	41096-7
Moulding (back window glass top)	422A28	Panel assy. (tail gate)	40700
Moulding (back window opening)-inner	42410	Panel assy. (tail gate inside belt finish)	425A20
Moulding (back window outside lower corner)	42406-7	Panel assy. (tail gate inside cover)	40705
		Panel assy. (upper back)	40310
Moulding (back window outside)-side	42492-3	Panel assy. (upper back finish)	40502
Moulding (back window outside)-top	42430-1		
Moulding (fuel filler door)	405A48	Pillar (rear corner)	403A78
Moulding (lower back finish panel)	45212-3	Pillar (rear corner inner front)-lower	41038-9
Moulding (lower back panel fuel filler lid)	405A48	Pillar (rear corner inner front)-upper	41228-9
Moulding (lower back panel)-lower	423A84	Pillar assy. (rear corner)	41210-1
Moulding (lower back panel)-side	40372-3	Pillar assy. (rear corner inner)	41032-3
		Pillar ass'y. (rear corner)-lower	412A02-3
Moulding (rear corner pillar outside)-rear	423A58-9	Pillar assy. (rear corner)-outer & inner	41022-3
Moulding (tail gate outside)	410A06-7		412A04-7
Moulding (tail gate outside center)	41018-9	Pin (tail gate counter balance spring)	430A08
Moulding (tail gate outside finish panel)	47002	Pin (tail gate counter balance strap tension)	430A24
Moulding (tail gate outside lower)	425A18	Pin (tail gate hinge)	43030
	47004	Pivot kit (tail gate upper hinge)	43096
		Plate (back window-regulator handle anchor)	44048
Moulding assy. (back belt)-outside-side	423A18-9	Plate (lift gate latch striker)	43422
Moulding assy. (back window garnish)-lower	42456	Plate (lift or tail gate lock striker)	43146-7
Moulding assy. (back window garnish)-side	423A74-5	Plate (lower back panel name)-"Falcon"	403A72
Moulding assy. (back window garnish)-upper	42410	Plate (rear corner outer panel end)	41098-9
Moulding assy. (back window outside lower center)	423A28		
Moulding assy. (back window outside upper)	423A00	Plate (tail gate counter balance torque bar mounting)	430A28
Moulding assy. (back window outside upper corner)	42376-7	Plate (tail gate hinge on body anchor)	43488
Moulding assy. (fuel filler opening lid)	405A66	Plate (tail gate latch striker)	431A72
Moulding assy. (rear lamp opening)	279A64-5	Plate (tail gate name)	42528
		Plate (tail gate spring access hole cover)	111A06
Nozzle (back window housing drain)	42312	Plate (tail gate support to pillar anchor)	444A00-1
Numeral (fuel filler opening lid)-"500"	403A36	Plate (upper back panel sill)	403D16-7
Numeral (lower back panel)	42549		
		Plate assy. (luggage compartment door lock)	43202
		Prop assy. (lift gate)	404A10-1

INDEX

BACK - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Rail (lower back panel outside finish)	42564	Shield (lower back panel splash)	403B34
Rail (tail gate outside finish)	40902	Shield (luggage compartment door to filler)	403C50
Rail (tail gate outside finish)-upper	423A70	Shield (tail gate trim water)	20318
Rail assy. (lift gate or back window header)	41302	Shield assy. (tail gate inside cover pad)	407A18
Rail assy. (rear door body header)	41302		
Regulator assy. (back window)-manual & electric	44000	Shim (tail gate latch striker plate)	431A61
Reinforcement (lower back center panel)	40338	Shim (tail gate lock striker plate)	43152
Reinforcement (lower back panel)-center	40440		
Reinforcement (rear corner lower pillar)	41058-9	Skid strip (tail gate)	44432-3
Reinforcement (tail gate counter balance spring bracket)	430A10-1		
Reinforcement (tail gate outside finish panel)	425A42	Socket (back window regulator stem)	44017
		Spacer (back window outside upper moulding)	42554
Release assy. (tail gate lock)	43814	Spacer (lift gate prop)	43958
Retainer (back belt moulding)	20850	Spacer (lift gate torsion bar bracket to body)	43498
	40248	Spacer (tail gate power-lift window regulator drive worm)	23590
Retainer (back window glass run)-upper	42372		
Retainer (back window glass run)-upper side	42374-5	Spring (back window regulator handle)	44036
Retainer (back window-outside lower center moulding)	423A26	Spring (back window regulator handle pawl)	44016
Retainer (back window outside upper moulding)	42413	Spring (fuel filler opening lid hinge)	405A24-5
Retainer (back window side weatherstrip lower)	42002-3	Spring (lift or tail gate latch)	43196
Retainer (fuel filler opening lid ornament)	405A70	Spring (tail gate counter balance)	430A00
Retainer (lower back finish panel)	423A64	Spring (tail gate lock latch)	431B50
Retainer (lower back panel moulding)	42527	Spring (tail gate lock pawl)	21988
Retainer (rear door lock cylinder)	43452	Spring (tail gate lock ratchet pawl)	431C76
Retainer (ski carrier)	55052	Stop (lift gate handle)	26514
			434A04
Retainer (tail gate inner panel bottom drain seal)	407A48	Strap assy. (tail gate counter balance spring)	430A14
Retainer (tail gate lower weatherstrip assembly)	402A06		43037
Retainer (tail gate ornament)	42622	Striker assy. (tail gate lock)	432A06
Retainer (tail gate outside lower finish rail)	42574		
Retainer (tail gate panel cover)	407A10	Strip (tail gate skid)	44432-3
Retainer (tail gate upper moulding)	42527	Strip assy. (back belt rail tacking)-center	41745
Retainer (upper back panel ventilating air grille)	403C52	Strip assy. (tail gate inside cover panel)	407A16-7
Retainer and moulding assy. (back window glass run)-top	422A54	Support (back window garnish lower moulding)	424A24
Retainer assy. (lower back panel moulding)	40368	Support (back window garnish side moulding)-lower	424A30
Retainer assy. (luggage compartment and tail gate moulding)	42527	Support (lower back finish panel)	403D56
Retainer assy. (rear corner pillar outside rear moulding)	410A30		
		Tail gate ass'y.	40702
Retainer assy. (spare wheel hold down bracket)	47062	Transfer (fuel filler opening lid graining)	40709
Retainer assy. (spare wheel well-upper)	470A42	Transfer (graining)-"Country Squire"	405A02
Retainer assy. (tail gate outside moulding)	407A12	Transfer (tail gate)-"Country Squire"	20748
		Tube and baffle assy. (back window housing drain)	40722-3
Rod (spare wheel mounting)	47114		424A62-3
Rod ass'y. (tail gate support)	44400-1	Weatherstrip (back window glass)	42084
		Weatherstrip (back window or door glass)	42084
Run and moulding assy. (back window outside)	422A66	Weatherstrip (back window)-side	42042-3
Run assy. (back window glass)-lower side	422A20-1	Weatherstrip (tail gate lower glass channel)	41662
Run assy. (back window glass)-side-upper	422A24-5	Weatherstrip (tail gate outer panel)-to belt	41610
Run assy. (back window glass)-top	422A36		
Run assy. (back window glass)-upper side	422A38-9	Weatherstrip assy. (back window glass)-inner	42072
		Weatherstrip assy. (back window glass to belt)	420A00
Screen (rear window)	40040	Weatherstrip ass'y. (lift gate)	43706
Screen (upper back panel ventilating air grille)	40392	Weatherstrip assy. (lift gate-upper)	404A06
Seal (back window glass)	420A28	Weatherstrip ass'y. (rear door)	43722-3
Seal (back window glass)-top	422A76	Weatherstrip ass'y. (tail gate)	41608
Seal (back window-outside lower center moulding)	423A98	Weatherstrip assy. (tail gate inner panel to belt reinforcement)	407A26-7
Seal assy. (tail gate inner panel bottom drain)	20700		
Seal assy. (tail gate lower corner)	43708-9	Welt (lift gate header and back door header trim)	42254
		Window assy. (back)	40010

INDEX

BODY ASSEMBLY

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Extension assy. (body rocker panel)-rear	101A92-3	Panel (body rocker)	10130-1
Insulator (body bolt)	00154	Panel assy. (body rocker)	10128-9
Kit (light weight body components)	00012	Retainer (body bolt insulator)-lower	00157
Moulding (body rocker panel)	10174-7	Retainer (body bolt insulator)-upper	00163
		Retainer (body rocker panel moulding)	10182
		Retainer assy. (body side medallion)	25666

BODY SIDE

Cover (body side extension rear lamp access opening)	27898-9	Panel assy. (body side)	27700-1
Extension assy. (body rocker panel)-rear	101A93	Panel assy. (body side upper)	278A92-3
Extension (body rocker panel)-front	10108-9	Panel assy. (body side window opening)	278B26-7
Fastener ass'y. (body side finish rail)	50108	Pillar assy. (center body)	24300-1
Kit (moulding body side)	21048	Plate (body rear corner panel reinforcement)	28038-9
Kit (Thunderbird side sports trim)	20000	Plate (body side name)	25622
Moulding assy. (body rocker panel)	10154-5	Reinforcement assy. (body rear corner panel)	278A68-9
Moulding assy. (body rocker panel)-rear	101A04-5	Retainer (body outside moulding)	425A16
Moulding (body rocker panel)	10176-7	Retainer (body rocker panel moulding)	10182
Panel (body rear side upper)	403A24-5	Retainer assy. (body rocker panel rear moulding)	10198
Panel (body rocker)	10130-1	Valve assy. (body rocker panel drain)	101A06
Panel (body side)-outer	278A98-9		103A58
Panel ass'y. (body rocker)	10128-9		

CONSOLE PANEL

Anti-rattle (console finish panel rear floor)	044E16	Panel (console panel radio access)	044C50-1
Box and snuffer assy. (console panel)	04821	Panel (console)-side	045A36-7
Bracket (console glove compartment door check arm)	060A10	Panel (console)-top	045A36
Bracket (console mounting)-rear	045B34	Panel (front console panel finish) and kit	044D90
Cap (console panel finish moulding)	044C54	Panel assy. (console panel center rear)	04567
Clip (console panel upper moulding)	044B26	Panel assy. (console panel side)	045A46
Connector (ventilator air register damper motor hose)	019A86	Panel assy. (console)-rear	045A86-7
Console assy. (less instruments)	045B55	Plate (console glove compartment door hinge anchor)	045A12
Control assy. (ventilator air register damper)	02006	Receptacle assy. (console panel ash)	06116
Cover (door window regulator control opening)	23373		04788
Door & plate assy. (console panel rear ash receptacle)	048A60	Reinforcement (console panel)-front	30702
Door & retainer assy. (console panel ash receptacle)	048A14	Reinforcement (console panel)-rear	044B90
Grille ass'y. (console panel radio)	04405		04300
Handle (console panel ash receptacle)	04830	Retainer (console panel lower edge)	04684-5
Hose (ventilator air register damper motor)	019A88	Retainer (console panel moulding)-front & lower edge	044C48-9
Motor & bracket assy. (ventilator air register damper)	019A84	Retainer (console panel rear moulding)	045A96
Moulding (console panel)-front	045B24-5	Retainer (owner identification plate)	06148
Moulding (console panel lower edge)	04578-9	Seal (console panel front)	045E18
Moulding (console panel)-rear	04736	Spring (console glove compartment door check arm)	06114
Moulding (console panel side)	045C26-7	Striker (console glove compartment door)	06157
Moulding (console panel side)-rear	045B70-1	Strip (console panel side flange breaker)	045B88
Moulding (console panel)-upper	045A20-1	Support (console glove compartment door lock)	06152
Moulding assy. (console panel side)	045C30-1	Support (console panel front)	045B28-9
		Support assy. (console)	045B56

INDEX

DOOR - FRONT

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Actuator assy. (door vacuum lock)	218A42-3	Fastener (front door inner panel bottom drail seal)	20807
Adapter (door vacuum lock control switch mounting)	218A84	Fastener ass'y. (front door outside finish rail)	50108
Anti-rattler (door lock actuating rod)	219A24-5		290B32
Anti-rattler assy. (door inside handle)	22660	Fastener assy. (front door power-lift window regulator bracket)	50108
Arm and plate assy. (door window regulator)	23234-5	Filler (door ventilating window frame)-at belt	222A82-3
Bearing (ventilating window lower pivot)-outer and inner	22330-A330	Frame assy. (door window glass)	22220-1
Bezel (door outside button)	224A06	Frame assy. (front door ventilating window)-less handle and glass	21608-9
Bezel (door vacuum lock control switch)	218A82		
Bracket (door ventilating window frame stabilizer)	22288-9	Glass (front door ventilating window)	21412
Bracket (door ventilating window lower pivot)	22954-5	Glass (front door window)	21410
Bracket (door ventilating window upper pivot)	21464-5	Glass and frame assy. (front door ventilating window)	21406-7
Bracket (door window stop)	21760-1	Glass assy. (ventilating window)-complete with frame	21402-3
Bracket (door window stop)-lower-on window	214A16	Grommet (door lock knob)	21999
Bracket (door window stop)-upper	21764	Guide ass'y. (door check)	23552
Bracket & bell crank assy. (door lock arm actuating & remote control rod)	218A30-1	Guide assy. (door window)-lockside	222A56
Bracket ass'y. (door lock arm actuating rod)	22376-7	Handle (door ventilating window locking)	22916-7
Bracket assy. (door window glass run)-lower	222A06	Handle assy. (door inside)	22600
Bracket assy. (door window regulator equalizer arm)	23230	Handle assy. (door outside)	22400-5
Bumper (door)	20122-5	Handle assy. (door window regulator)	23342
Bumper (door at lock)	23030	Hinge (door ventilating window upper pivot)	21466-7
Bumper (door window stop)	21762	Hinge and check assy. (front door)-lower	22976-9
Bumper assy. (door at belt)	23036-7	Hinge assy. (door)	22806-7
Bumper ass'y. (door ventilating window frame)	21774-5	Hinge assy. (door)-lower	22800-1
Bushing (door hinge)	22841	Hinge assy. (door)-upper	22810-1
Bushing (door lock pawl)	21801	Hinge assy. (door ventilating window)-upper pivot	22800-1
Bushing (door ventilating window pivot)	22960	Hose (door latch vacuum)	21490-1
Button (door window frame bolt access plug)	22285-6		21927
Button (front door wire opening plug)	202A32	Insert (door lock striker plate)	22040
Button and guide ass'y. (door outside handle)-Kit	22454-5	Insert (door outside upper finish rail)	208A16-7
Button assy. (door outside handle)	22484		
Cap (door belt breakover)-front & rear	20360-3	Key (door and ignition lock)-blank	22053
Channel and retainer ass'y. (front door glass)	21458-9	Key (door ventilating window locking handle)	22920
Channel ass'y. (front door glass guide arm roller)	21512-3	Kit (door lock cylinder cover and spring)	21942-3
Clip (arm rest)	24146	Kit (door outside handle button and lock cyl. retainer)	22442-3
Clip (door lock control link retaining)	21954-5	Kit (door outside rear edge moulding)	20910
Clip (door lock release link retaining)	431C56	Kit (door window regulator drive gear)	234A24
Clip (door lock rod)	21952	Kit (front door power-window regulator, drive and coupling)	23204-5
Control and link ass'y. (door lock remote)	21818-9	Kit (outside door handle)	22400-1
Coupling (power-lift window regulator drive)	23440	Kit (window shade)	22856
Coupling assy. (ventilating window drive shaft)	23624	Knob (door locking control rod)	21850
Cover (body side extension rear lamp access opening)	27898-9	Knob (door or ventilating window regulator handle)	23352
Cover (door window garnish moulding trim)	21076-7		
Cover (door window regulator control opening)	23876	Latch assy. (door)	21812-3
Cover assy. (door lock cylinder key hole)	21942	Lever (door lock operating)	21970-1
Cylinder and key set (door and ignition lock)	22050	Lever assy. (front door lock actuating rod)	22384-5
Deflector (door ventilating window air)	22268-9	Link (door latch control rod lever)	219A84
Door assy. (front)	20124-5	Link (front door lock remote control)	21940
Door glass (front)	21410	Link assy. (door latch control rod lever)	219A84
Door glass (vent.)	21412	Link ass'y. (door lock remote control)	21928-9
Door handle (outside)	22400-1	Lock and sleeve ass'y. (door pillar)-w/2 keys	21984-5
Drive ass'y. (power-lift window regulator)	23394-5		
Escutcheon (door inside handle)	22620-1	Motor & cover assy. (front door ventilating window)	23406-7
	303A20	Moulding (door arm rest)	24190-1
	22620-1	Moulding (door)-outside-lower	20878
Escutcheon (front door inside handle)	22618		20938-9
Escutcheon assy. (door inside & window reg. handle)	22635	Moulding (door outside panel)	20934-5
	22112	Moulding (door outside rear)-upper	20982-3
Extension (door lock control rod lever)	22112	Moulding (door outside upper)	20932-3
Extension assy. (door vent. window regulator shaft)	23442	Moulding (door trim)-rear or lower rear	20920-1
		Moulding (door trim)-upper	20968-9

INDEX

DOOR - FRONT - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Moulding (front door outside)-top	20492-3	Retainer (door rear weatherstrip at belt)	20572-3
Moulding (front door window frame outside)-top	20846-7	Retainer (door trim panel)	21032
Moulding and retainer assy. (door trim)-lower	20956-7	Retainer (door trim panel)-front & rear	237A24-7
Moulding assy. (door outside rear)	20938-9	Retainer (front door latch vacuum control)	219A92
Moulding assy. (door outside upper)	20936-7	Retainer (front door trim panel)-upper and lower	23760-3
Moulding assy. (door trim)-upper	21110-1	Retainer (roof headlining trim)	20918
Moulding assy. (front door window garnish)	20904-5	Retainer & division bar assy. (front door ventilating window)	22204-5
Nut (door vacuum lock control mounting)	22158	Retainer assy. (door glass run)-lock side	222A00-1
Ornament (door)-outside	20980	Retainer ass'y. (door outside handle button)	22442-3
Ornament (door trim)	20802	Retainer assy. (door outside lower moulding)	290B82
Ornament (door window garnish)	21016	Retainer assy. (door outside moulding)	20880-4
Pad (door outside handle)-large	22428-9	Retainer assy. (door outside upper moulding)	21094-5
Pad (door outside handle)-small	22448-9	Retainer assy.(moulding)-includes clip-Universal	20262
Panel (door outside finish)	20206-7		21094
Panel (door trim finish)-lower front	23778-9		20842
Panel (door trim inside finish)	237A22-3	Rivet (division bar weatherstrip)	21524
Panel (door trim inside finish)-lower rear	237A56-7	Rod (door bellcrank to door lock control lever)	218A28
Panel (front door outer)-repair	20204-5	Rod (door lock actuating)	22152
Panel assy. (door outer)-repair	20200-5	Rod (door lock control to cylinder lock)	22134-5
Pin (door hinge)	22840	Rod (door lock push button)	21852-3
Pin (door hinge)-upper	22840	Rod (front door actuating)	22380-1
Pin (door outside handle release)	22438		218A24-5
Pivot (door ventilating window)-lower	22908-9	Roller assy. (door & quarter window regulator arm)	23240 or
Pivot (door ventilating window)-upper	22952-3		262A32
Plate (door arm rest finger tip)	24142-3	Run (front door glass)-hinge side	21546
Plate (door lock striker auxiliary)	22014-5	Run (front door glass top)	21596
Plate (door lock striker tapping)	22024	Run & bracket assy. (vent window division bar glass)	21538-9
Plate (door outside handle finish)	20966-7	Run assy. (front door glass)-lock side	21508-9
Plate (door outside name)-upper-"Country"	20978		21550
Plate (door scuff)	13208-9	Seal (door ventilating window pivot)-upper	22964
Plate (door ventilating window access hole cover)	20348-9	Seal (door ventilating window adjustment opening)-at belt	222A78
Plate (door window regulator and door handle)	23370	Seal (door vent. window to door inner panel extension)	222A80-1
Plate & bellcrank assy. (door lock remote control)	22062-3	Seal assy. (door front at belt)-inner	20568-9
Plate ass'y. (door lock striker)	22008-9	Seal assy. (door inner panel bottom drain)	20700
Plate assy. (trade mark)	017A06	Shield (door & quarter trim water)	20318
Plug (door glass run access)	22300	Shield (door ventilating window rain)	22884-5
Plug (door ventilating window mounting access)	22304	Shield (door wiring)	20770
Rail ass'y. (front door outside finish)-upper	20424-5	Shield (front door ventilating window rain)	222A20-1
Rail (front door outside finish)-center	20722-3	Shield ass'y. (door wiring)	20768-9
Rail (front door outside finish)-lower	20402-3	Shim (door lock striker plate)	22058
	20868-9	Spacer (door outside button)	224A08
Rail (front door outside finish)-upper	20960-1	Spacer (door power-lift window regulator drive worm)	23590
Regulator assy. (door ventilating window)	23402-3	Spacer (door window garnish moulding)	20922
Regulator assy. (door window)	23200-1	Spacer (door window regulator handle escutcheon)	22612
Regulator ass'y. (door window)-less arms	23202-3	Spring (door hinge and check)	21232
Regulator assy. (power-lift window)-less motor, etc.	23208-9	Spring (door inside and window regulator handle)	22624
Reinforcement (door trim panel)-lower edge	23946-7	Spring (door lock main)	21858
Reinforcement (front door lock striker anchor plate)	22078-9	Spring (door lock operating lever retaining)	22075
Reinforcement assy. (door lock striker anchor plate)	22142-3	Spring (door outside handle push button)	22462
Reservoir assy. (door vacuum lock control)	219A02	Spring (door power-lift window regulator counter balance)	23318
Retainer (door bottom weatherstrip)	20712	Spring (door remote control)	21910
Retainer (door lock cylinder)	22023	Spring (door ventilating window locking handle)	22986
	22027	Spring (door ventilating window pivot)	22926
Retainer (door lock striker anchor plate)	22021	Spring (door window regulator roller)	23243
Retainer (door lower moulding)-outside	21020	Spring (luggage compartment door lock key hole cover)	22006-7
Retainer (door opening windlace)	02614		
Retainer (door outside moulding)	21060-6	Stop (door ventilating window pivot)	22992-3

INDEX

DOOR - FRONT - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Stop (door window)-lower	21760	Valve assy. (door vacuum lock control)	219A00
Stop (door window)-upper	21768		
	21770-1	Washer (door ventilating window locking handle)	22982
Stop assy. (door window)-lower	21758-9	Washer (door ventilating window pivot friction)	22963
Stop assy. (door window)-upper	222A24	Weatherstrip (door front at belt)-inner	20580-1
		Weatherstrip (door glass at belt)-inner	21456-7
Strip (door glass retaining)	21478	Weatherstrip (door ventilating window division bar)	21450-1
Strip (door trim inside finish panel)-rear and front	237A52-4	Weatherstrip (front door glass channel)	21510
Strip ass'y. (front door window finish)	20904-5	Weatherstrip (front door)-outer	20530-1
Support ass'y. (door glass run)-lock side	21514	Weatherstrip ass'y. (door opening)-outer	20530-1
Support ass'y. (door window lower stop)	21572	Weatherstrip ass'y. (front door ventilating window)	21448-9
Support assy. (door window rear at belt)	222A52-5	Weatherstrip ass'y. (front door window glass)	21452-3
		Window ass'y. (door ventilating)-complete	21402-3
Transfer (graining)-"Country Squire"	20748	Window ass'y. (door ventilating)-front	21406-7
Trough (door ventilating window drain)	22910-1	Window ass'y. (front door ventilating)	21406-7

DOOR - REAR

Anti-rattler assy. (rear door inside handle)	22660	Glass (rear door stationary window)	25723
Arm assy. (rear door window stabilizer)	26256-7	Glass (rear door window)	25712-3
		Glass ass'y. (rear door stationary)	26870-1
Bar assy. (rear door window division)	26900-1	Glass channel (rear door)	26228-9
Bellcrank (rear door lock)	26448-9	Glass channel ass'y. (rear door)	26228-9
		Guide assy. (rear door window)-center	26392-3
Bracket (door arm rest finger tip plate to inner panel)	241A10-1	Guide ass'y. (rear door window)-front	26216-7
Bracket (rear door window glass channel)	26384		
Bumper (door)	24630-1	Handle (rear door outside)	26604-5
Bumper assy. (rear door at belt)	27224-5	Handle ass'y. (rear door inside)	22600
Bushing (door hinge)	22841	Handle ass'y. (rear door inside assist)	24648
Bushing (rear door window regulator arm)	234A28	Hinge and check assy. (rear door)-lower	26802-3
		Hinge ass'y. (rear door)-upper	26800-1
Button & housing assy. (rear door outside)	266A12-3		
Button & pin ass'y. (rear door outside handle)	26410-1	Insert (door lock striker plate)	22040
Button assy. (rear door outside handle)-includes seal	26602	Insert (door outside upper finish rail)	20966-7
Button assy. (rear door window rear guide)	22454-5		
	25894-5	Kit (door window regulator drive gear)	234A24
		Kit (rear door safety lock)	21850
Carriage assy. (rear door window roller)-rear	262A62	Kit (window shade)	22856
Channel assy. (rear door glass)	26228-9	Knob (door window regulator handle)	23352
Clip (arm rest)	24146	Knob assy. (rear door inside handle)	22654
Clip (rear door extension panel retaining)	247A08		
Clip (rear door window)-rear	263A76	Lever (rear door lock actuating rod)	26452
Control and link assy. (rear door lock remote)	26404-5	Link (rear door lock)	26420-1
Cover (rear door pull handle)	22678	Link (rear door lock remote control)	26442-3
Cover (rear door window regulator handle screw)	23362	Link (rear door lock remote control)-rear	26490-1
Cup (door inside handle)	22634		26498
		Lock assy. (rear door)	26412-3
Dampener (rear door latch spring vibration)	219A37		
Door assy. (back)-78	40010	Moulding (rear door arm rest)	24190-1
Door assy. (rear)	24630-1	Moulding (rear door garnish finish)	25536-7
Dovetail (rear door window)	262A28-9	Moulding (rear door outside belt)-rear	254A92-3
Drive ass'y. (power-lift window regulator)	23394-5	Moulding (rear door outside)-lower	25556-7
		Moulding (rear door outside)-lower rear	25532-3
Extension (rear door inside upper rear)	24744-5	Moulding (rear door outside top)-front	254A12-3
Extension (rear door outside upper rear)	24740-1	Moulding (rear door outside top)-rear	25522-3
Extension assy. (rear door inside panel to outside panel)-front	24702-3		
		Moulding (rear door outside)-upper	25540-1
Fastener (rear door panel bottom drain seal)	20807	Moulding (rear door outside)-upper front	25586-7
Fastener ass'y. (rear door outside finish rail)	50108	Moulding (rear door outside upper rear extension)	25018-9
Fastener assy. (rear door power-lift window regulator bracket)	50108	Moulding (rear door window frame outside)-front	20982-3
Frame (rear door glass)-upper	290B32	Moulding (rear door window frame outside)-rear	254A04-5
Frame ass'y. (rear door glass)-upper	26242	Moulding (rear door window garnish)	25514-5
	26220-1	Moulding (rear door window outside)-top	25542-3

INDEX

DOOR - REAR - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Moulding and retainer ass'y.(rear door trim)-lower	25578-9	Rod (rear door lock push button)	26460-1
Moulding and retainer ass'y.(rear door trim)-upper	25558	Run (rear door glass)	25764
Moulding assy.(rear door outside upper rear)	26090-1	Run and bracket assy.(rear door stationary window division bar glass)	262A02-3
Moulding ass'v. (rear door trim)-rear	25546-7		
Pad (rear door inside assist handle)	24650	Run and retainer assy.(rear door glass)-hinge side	262A16-7
Pad (rear door outside handle)-large	26640-1	Run assy. (rear door glass)	25760
Pad (rear door outside handle)-small	26638-9	Run assy. (rear door glass)-lockside	25748
		Run assy. (rear door glass)-lower hinge side	25852
Panel (rear door outside finish)	24730-1	Run assy. (rear door glass)-rear	27264
Panel (rear door trim panel finish)	254A86-7	Run assv. (rear door glass)-rear inner	25754
Panel (rear door upper rear extension)	247A02-3	Run assy. (rear door glass)-rear outer	25742-3
Panel (rear door upper rear extension)-inner	24814-5	Run ass'v. (rear door glass)-top	25766
Panel assy. (door outer)-repair	24700-5	Run assy. (rear door glass)-upper hinge side	25858
Pin (rear door hinge)	26832	Seal (rear door latch remote control)	219A59
		Seal (rear door upper rear extension)	24896-7
Plate (rear door arm rest finger tip)	24142-3	Seal assy. (door inner panel bottom drain)	20700
Plate (rear door outside handle finish)	25584-5	Seal assy.(door inside panel)-lower	21122
Plate (rear door scuff)	13228-9	Seal assy. (rear door front extension)-upper	24998
Plate (rear door window regulator and door handle)	23370		
Plate assy. (door window glass run retainer)	214A26	Shield (door trim water)	20318
		Shield (rear door trim water)	27458
Rail (rear door outside finish)-lower	25300-1	Shield assy. (rear door wiring)	24784-5
	25426-7		
Rail (rear door outside finish)-upper	25320-1	Shim (rear door lock striker plate)	265A06
	254A00-1	Spacer (rear door power-lift window regulator drive-worm)	23590
Rail assy. (rear door outside finish)-center	25352-3	Spacer (rear door trim panel)	23796
Regulator (power-lift window)-less motor, etc.	27008-9	Spring (door hinge and check)	21232
Regulator assy. (rear door window)	27000-1	Spring (rear door check arm)	27206
Reinforcement (rear door glass frame)-upper front	26290	Spring (rear door check assist)-on lower hinge	26808-9
		Spring (rear door check)-on lower hinge	26833
Retainer (door arm rest finish panel)	240A16	Spring(rear door inside and window regulator handle)	22624
Retainer (rear door arm rest finish panel)	274A16-7	Spring (rear door latch toggle)	21872-3
Retainer (rear door arm rest insert plate)	240A18	Stabilizer and weatherstrip assy.(rear door window)	25478-9
Retainer (rear door glass run)	21572		
Retainer (rear door lower moulding)-outside	29144	Stop (rear door window)-lower front	26058
Retainer (rear door outside belt moulding)	25526	Stop (rear door window)-upper	25780
Retainer (rear door outside lower moulding)	25553	Stop (rear door window upper) front	262A20-1
Retainer (rear door outside lower moulding)-center	20830 or 208A44	Stop (rear door window upper) rear	262A84
	20954		
Retainer (rear door outside lower moulding)-rear	21060-6	Stop assy. (rear door window)-lower	21758
Retainer (rear door outside moulding)	20818	Striker (rear door window dovetail)	262A30-1
	25670	Striker assy. (rear door lock)	265A04
Retainer (rear door stone guard)	21032-3	Strip assy. (rear door window finish)	25514-5
Retainer (rear door trim panel)	25576-7	Support (rear door arm rest)	27538-9
	27590-1		
Retainer (rear door trim panel)-lower	27588-9	Transfer (graining)-"Country Squire"	20748
Retainer (rear door trim panel)-upper	20586		
Retainer (rear door weatherstrip)		Weatherstrip (rear door glass channel)	26258
		Weatherstrip (rear door stationary window)	262A11
Retainer and bracket assy. (rear door stationary window weatherstrip)	26084 262A07	Weatherstrip (rear door stationary window)	26894-5
		Weatherstrip (rear door upper rear extension)-outer	25474-5
Retainer assy. (door outside moulding)	20880-4	Weatherstrip assy. (rear door)	25324-5
Retainer assy. (moulding)-includes clip-Universal	21094	Weatherstrip assy. (rear door front)-at belt	25324-5
Retainer assy. (rear door glass run)-front	25796-7		
Retainer assy. (rear door glass run)-lockside	25804-5	Weatherstrip assy. (rear door glass at belt)-inside	25860-1
Retainer assy. (rear door outside lower moulding)	290B82	Weatherstrip ass'y. (rear door glass at belt)-outside	25596-7
Retainer assy. (rear door outside moulding)	21094-5 25562-3	Weatherstrip ass'v. (rear door glass)-front	25824-5
	29211	Weatherstrip assy. (rear door glass run)-rear	25476
Retainer assy. (rear door outside moulding)-front	20842		
Retainer assy. (rear door outside upper moulding)	25034	Window regulator (rear door)	27000-1
Retainer assy. (rear door pull handle)	22676		

INDEX

FLOOR

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Anti-rattler assy. (spare tire well cover panel)	47017	Gusset (floor side member to rear side member)	10196-7
Arm assy. (front vibration damper restrainer)	11034-5	Gusset (floor side member to wheelhouse)-upper, inner front & rear	103A18-23
Arm assy. (spare wheel well floor pivot)	45842-3	Gusset (front floor lower cross member)	109A76-7
Baffle (fuel filler pipe)	11104	Gusset (front side member to front suspension mounting bracket)-front	11064-5
Brace (front support to side member)	10376-7	Gusset (front side member to front suspension mounting bracket)-rear	11072-3
Brace (rear floor side member to rear floor cross member)	102A44	Gusset (front side member to lower dash panel reinforcement)	11062-3
Bracket (auxiliary floor support)	111A00-1	Gusset (rear floor rear cross member)	10776
Bracket (cross member to engine support)	10050-1	Gusset (rear side member to floor side member)-inner	104A38-9
Bracket (floor pan to rear seat back strainer)	11456	Gusset (rear side member to floor side member)-outer	103A44-5
Bracket (front side member extension)	103A32-3	Gusset assy. (front floor upper cross member)	10968-9
Bracket (front suspension No.2 cross member)	11008	Housing (fuel tank filler pipe)	11309
Bracket assy. (auxiliary seat cushion floor pivot)	606A78	Housing assy. (fuel tank filler pipe)	11310
Bracket assy. (spare wheel hold down)	47105	Latch assy. (spare wheel well cover)	47256
Bumper (space tire well cover panel)	40639	Member (floor cross)-rear	10780
Catch (stowage compartment lock)	11550	Member (floor side inner)	10116-7
Chain assy. (spare tire well panel check)	45836	Member (floor side lower)	10026-7
Clip (spare wheel well cover panel)	47154	Member (floor side)-outer	10120-1
Cover (auxiliary floor panel)	11583	Member (front cross)	10852
Cover (floor cross member No.3 upper access holes)	10889	Member (front end cross)-at dash	10414
Cover (floor side member reinforcement)	104A24	Member (front floor cross No. 2)	10728
Cover (front side member front extension opening)	103A54	Member (front floor to dash)	10896-7
Cover (fuel tank filler pipe)	11201	Member (front suspension No. 1 cross)	10018
Cover (rear floor pan fuel gauge)	11290	Member (rear floor cross)-front	10786
Cover (rear shock absorber mounting access hole)	12129	Member (rear floor cross-rear)	10746
Cover (spare wheel well panel)	47022	Member (rear floor cross rear front)	10700
Cover assy. (spare wheel well)	47042	Member ass'y. (floor cross No. 2)	10690-1
Cover assy. (stowage compartment door lock)	11598	Member ass'y. (floor cross No. 3)-lower	10698
Cover assy. (transmission band adjusting access)	12128	Member ass'y. (floor cross No. 3)-upper	10734
Cover set (cargo floor complete)	60925	Member assy. (floor side outer)	10100-1
Cylinder assy. (stowage compartment lock)-w/keys	115A32	Member ass'y. (floor side)-rear	10124-5
Damper and arm assy. (front vibration)	11032-3	Member assy. (floor side rear inner)	10518-9
Escutcheon (rear seat back floor panel stop)	606A24	Member assy. (front floor cross)-lower	10812-3
Extension (center floor pan side)-rear	11186-7	Member ass'y. (front floor cross No. 1)	10692-3
Extension (center floor pan to wheelhouse)	11212-3	Member assy. (front floor cross No. 2 center)	10656
Extension (floor side inner member)-front	10066-7	Member assy. (front floor cross No. 2 outer)	10662
Extension (floor side inner member reinforcement)	104A94-5	Member assy. (front floor cross)-upper	10672-3
Extension (floor side member to front side member)-front	103A28-9	Member assy. (front side)	10462-3
Extension (floor side outer member)	10492-3	Member assy. (front side outer)	10218-9
Extension (front floor to dash panel member)	10960-1	Member ass'y. (front suspension No. 2 cross)	10010
Extension (front side member)	10062-3	Member assy. (rear floor cross)-fuel tank frt.support	11368
Extension (rear floor cross sill to inner quarter panel)	10796-7	Moulding (rear floor pan)-side	111A08-9
Extension (rear floor pan rear corner)	11252-3	Pan (auxiliary floor)	11580
Extension (rear floor pan to quarter panel)	11250	Pan (front floor)	11140
Extension (rear floor rear sill panel)	10838-9	Pan (rear floor)	11218-9
Extension (spare wheel well side)-lower front	47122	Pan (rear floor)-center	11160
Extension (spare wheel well side)-lower rear	47120	Pan (rear floor)-rear	11360
Extension assy. (front side inner member)	10556-7	Pan assy. (front floor)	11135
Extension assy. (front side member)-front	101A22	Pan assy. (rear floor)	11215
Extension assy. (rear floor pan to quarter panel)	11238-9	Panel (auxiliary floor front finish)	115A50
Extension assy. (rear floor pan to wheelhouse)	111A62-3	Panel (spare wheel well)-front	47046
Extension assy. (spare wheel well panel)-lower	47020	Panel (spare wheel well side)-inner-R. H. -refer to 27859 for L. H.	47028
Filler (auxiliary floor to quarter wheelhouse)-inner	111A82-3	Panel (spare wheel well side)-lower	47030
Filler (floor side inner member reinforcement)	10432-3	Panel (spare wheel well)-upper	47032
Filler (floor side outer member)-front end	10170-1		
Filler (rear floor pan)	11103		
Filler (rear floor to quarter panel)	11228-9		

INDEX

FLOOR - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Panel assy. (auxiliary floor)-without cover	11564	Reinforcement (rear floor rear extension)	112A10-1
Panel assy. (rear floor sill)-rear	11323	Reinforcement (rear side member)	10530
Panel assy. (spare tire well)-less cover	47007	Reinforcement assy. (floor side inner member)	10418-9
Plate (floor storage compartment lock striker)	60060	Reinforcement assy. (floor side inner member to front side member filler)	10562-3
Plate (floor transmission cover)	12110	Reinforcement assy. (floor side member to rear side member)	10200-1
Plate (floor transmission cover adapter)	12120	Reinforcement assy. (floor side rear member at rear spring)	10860-1
Plate (front door scuff)	13208-9	Reinforcement assy. (floor transmission cover plate)	12118
Plate (front floor lower cross member)	10962	Reinforcement ass'y. (front floor pan seat track)	11246-8
Plate (front floor pan access hole cover)	111A74	Reinforcement assy. (rear floor pan to wheelhouse extension)	111A76-7
Plate (front floor pan drain hole cover)	11117	Reinforcement assy. (rear floor rear sill panel)	111A40
Plate (front side member to front suspension housing cover)	10280-1	Reinforcement assy. (stowage compartment door latch)	11688
Plate (rear door scuff)	13228-9	Retainer (body bolt No.6 anchor plate)	111B88
Plate (rear floor member brake anchor)	102A46	Retainer (front floor mat to seat track)	13190
Plate assy. (front floor lower cross member)	10962	Retainer (rear floor pan rear corner cover)	112A54-5
Plug (floor pan seat belt anchor opening)	10034	Retainer (spare wheel well floor wing screw)	47126
Reinforcement (center floor pan)-rear	11108	Retainer assy. (floor side member moulding)	10198
Reinforcement (center floor pan to seat back strainer)	11192	Riser (rear floor front)	12004
Reinforcement (dash to frame brace to floor side member)	016A12-3	Seal assy. (rear floor pan extension drain)	11202
Reinforcement (floor side member rear extension)	105A70	Set (vinyl floor cover for complete unit)	60925
Reinforcement (floor side member to front side member)-front	10262-3	Shield (door scuff plate-wiring)	13220
Reinforcement (floor side member to front side member)-rear	10156-7	Sill ass'y. (front cross)-body type 66	10610
Reinforcement (floor side outer member)	10132	Stop (auxiliary seat back floor panel)	606A22
Reinforcement (floor side rear outer member)	10496-7	Strip (rear floor finish)-wheelhouse-rear	13234-5
Reinforcement (floor side rear outer member)-rear	102A91	Strip (rear floor finish)-wheelhouse-side	13210-1
Reinforcement (front floor pan)	111A44-5	Strip (rear seat back floor skid)-center	60684
Reinforcement (front floor pan cross)	111B08	Strip (rear seat back floor skid)-intermediate	60685
Reinforcement (front floor pan rear)	11144-5	Strip (rear seat back floor skid)-outer	60678
Reinforcement (front floor pan seat track-lower)	11634	Strip (spare tire well panel finish)-rear	47148
Reinforcement (rear floor cross member to floor pan)	10950-1	Support or shield-wiring (door scuff plate)	13218-20
Reinforcement (rear floor cross member)-upper	10790-1	Support (rear floor pan to rear side member)	111A34-5
Reinforcement (rear floor front riser)	12000	Support (spare wheel to floor)	47066
Reinforcement (rear floor pan at luggage compartment door lift bracket)	112A78-9	Support (stowage compartment lock striker)	11510
Reinforcement (rear floor pan muffler outlet pipe bracket)	11378	Tube (spare wheel well drain)	40743
Reinforcement (rear floor rear cross member)	10760		

FRONT

Air extractor (kit) fast back	29705	Bracket assy. (dash at steering column support reinforcement)	016B13
Anti-rattler (cowl ventilator screen)	02298	Brake scoop (kit)	29705
Anti-squeak (cowl top ventilator grille)	02204	Bumper (glove compartment door)	06066
Bar assy. (engine compartment support)	29432	Clip (cowl side trim panel retainer)	02359
Bezel (ventilator air register damper control)	018B00	Collar (cowl top inner panel)	02254
Brace (brake pedal support)	01524	Collar assy. (ventilator air inlet duct)	02880
Brace (brake pedal support to instrument panel)	015A08	Connector (ventilator air register damper motor hose)	019A86
Brace (cowl side)	01778	Control assy. (air)	01890-1
Brace (cowl side panel)-outer	020A62-3	Control assy. (ventilator air register damper)	02006
Brace (dash to frame)	01726-7	Cover (cowl top inner panel)	02084
Brace assy. (dash to frame)	01714-5	Cover (dash panel heater opening)-inner	018B12
Bracket (air control mounting)	01870	Cover (front body pillar outer reinforcement weld access)	025A46
Bracket (cowl top panel to front fender apron)	02294-5	Damper ass'y. (ventilator air valve)	01862
Bracket (cowl top ventilator grille support)	02218	Duct ass'y. (ventilator air)-outlet	01934-5
Bracket (ventilator air register damper)	01918		
Bracket assy. (automatic transmission shift mounting plate)	045B80		

INDEX

FRONT - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Extension (cowl side panel)	02062-3	Pillar assy. (front body)	02500-1
Extension (dash panel lower reinforcement)	016A06-7	Pillar ass'y. (front body)-upper inner	02522-3
Extension ass'y. (cowl top ventilator grille)	02214-5	Pillar assy. (front body)-upper outer	02536-7
Extractor assy. (air)	280B62-3		
Filler (cowl side trim)-lower	020A06-7	Plate (cowl top inner panel drain collar seal)	020A44
Filler (front body pillar to fender)-lower	02670-1	Plate (front body pillar hinge anchor-lower)	02638
Filler (front body pillar to fender)-upper	02654-5	Plate (front fender name)	50399
		Plate (heater opening cover)	01846
		Plate (steering column opening cover)	01698-9
		Plate assv. (trade mark)	017A06
Gasket (ventilator air duct drain)	018B32		
Gasket (ventilator air inlet duct to cowl top panel)	01999	Register (ventilation)	01820-1
Gasket (ventilator air register)	01408	Register assy. (ventilation air)	01814-5
Grille (cowl top ventilator)	02228		
Grille assy. (cowl top ventilator)	02222	Reinforcement (cowl side panel to floor)	02916-7
Grommet (dash panel overdrive cable)	01G94	Reinforcement (dash at steering column support)	01697
		Reinforcement (dash panel outer)	017A00-1
Gusset (cowl side to front pillar lower)	02426-7	Reinforcement (dash panel to front floor pan)	016A22-3
Gusset (dash panel lower reinforcement to body mounting plate)	01780-1	Reinforcement (dash to frame brace to floor side member)	016A12-3
Gusset (dash panel lower reinforcement to front side member)	017A24-5		
Gusset (dash panel reinforcement)	016A02-3	Reinforcement (front body pillar outer lower)	02560-1
Gusset (dash panel to floor side member)	021A14-5	Reinforcement (front body upper inner pillar)-upper	02694-5
Gusset assv. (dash panel lower reinforcement)	017A22-3		
Gusset assy. (dash panel reinforcement)	016A14-5	Reinforcement assy. (cowl side panel)	02884-5
		Reinforcement assy. (dash panel)-lower	016A32-3
Hose (ventilator air register damper motor)	019A88		
Insignia (hood)	42550	Retainer (cowl top outer panel-to head seal)	02807
Insulator ass'y. (dash)	01670-1	Retainer (cowl top ventilator grille)	02316
Insulator assy. (dash)-end	01709	Retainer (cowl top ventilator grille)-outer	02420
Insulator assy. (dash panel steering column opening cover sound)	01708	Retainer (dash panel at w/s wiper hose opening seal)	016B06
		Retainer (door opening windlace)	02614
		Retainer (front body pillar upper weatherstrip)	02594-5
Kit (front fender triple accent stripe)	20000		
Knob (cowl side ventilator or air door control lever)	02145	Retainer assy. (brake pedal bracket to cowl top inner panel)	01570
		Retainer assy. (front door glass run)-lock side	222A00-1
		Retainer assy. (hood front outer moulding)	50273
Letter (hood or grille)	40282		
Medallion (hood)	25662	Scoop (brake side)	29076-7
Moulding (cowl top panel)	02814	Seal (dash panel at windshield wiper hose opening)	016B04
Moulding (front pillar drip)	025A20-1	Seal (dash panel heater opening cover)	01810
Moulding (ventilator air register finish)	01412-3		
Moulding (ventilator air register panel)	01453-63	Seal (front body pillar at belt)	02716
Moulding (ventilator air register panel)-L. H.	04240-1	Seal (steering column opening cover plate)	01738
Moulding (ventilator air register panel)-R. H.	04190	Seal (ventilator air duct)-outer	01970
Moulding (ventilator air register panel upper outer)	018A04-5		
Nut (ventilator air control bezel)	019A10	Spring assy. (steering column opening cover retaining)	017A30
Pad (radiator grille name plate)	43544	Stabilizer (front body pillar to dash)-instrument panel	02546
Panel (dash)	01G05		
Panel (ventilator air register)	02800-1	Support (body front lower panel)	00214
Panel (ventilator air register finish)	01412-3	Support (ventilator air outlet duct)	018A56
		Support assy. (brake pedal)	01508
		Support assy. (parking brake bracket to cowl side)	02246
Panel assv. (cowl side)	02038-9		
Panel ass'y. (cowl top)	02010	Tee (ventilator air register)	018B14
Panel assy. (cowl top)-outer	02012		
Panel ass'y. (dash)	01610	Trough assy. (front body upper pillar)	025A10-1
Panel ass'y. (front pillar and cowl side)	02042-3	Tube (cowl top inner panel drain)	02207
Pillar (front body)-upper inner	02508-9		
Pillar (front body upper inner corner)	02622-3	Valve (ventilator air heater duct)-drain check	019A48
Pillar (front body)-upper outer	02516-7	Valve assy. (ventilator air)	01850-1
Pillar (front body upper outer corner)	02616-7		
		Weatherstrip (front body pillar)-upper	02626-7

INDEX

GLOVE COMPARTMENT

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Bezel (glove compartment door lock)	060A12	Latch assy. (glove compartment door)-non locking	06072
Brace (glove compartment door lock striker)	017A64	Lock assy. (glove compartment door)-with lock cylinder & 2 keys	06081
Bracket assy. (glove compartment door lock catch striker)	06158	Lock set (glove & luggage compartment door)-with keys	43507
Bumper (glove compartment door)	06024	Moulding (glove compartment door)	04773
Cable assy. (glove compartment door check)	060A08	Panel (glove compartment door finish)	06036
Catch (glove compartment door latch striker plate)	06064	Panel assy. (glove compartment door finish)	06196
Compartment assy. (glove)	06010	Plate (glove compartment door lock catch anchor)	06150
Cover assy. (glove compartment fuse panel openings)	06156	Plate (glove compartment door lock striker)	06064
Door assy. (glove compartment)	06024	Retainer (glove compartment door lock catch)	06125
Emblem (glove compartment door push button shield)	04407	Shield (glove compartment door lock push button)	06190
Escutcheon (glove compartment door lock)	06095	Spring (glove compartment door)	06069
Glove compartment assy.	06010-5	Stop (glove compartment door)	06117-8
Grommet (glove compartment door check arm)	06122		
Hinge assy. (glove compartment)	06050		
Key (glove compartment and rear door cylinder lock)	43562		

INSTRUMENT PANEL

Bar assy. (passenger assist)-less pad & retainer assy.	045B22	Moulding (instrument panel end)	04518-9
Box and snuffer assy. (instrument panel ash receptacle)	04821	Moulding (instrument panel end lower)	044B54-5
Brace (brake pedal support to instrument panel)	015A08	Moulding (instrument panel end upper cover retaining)	04287
Bracket (door latch remote control)	219A32	Moulding (instrument panel extension)-lower	044B02-3
Bracket (instrument panel clock opening cover mounting)	04396	Moulding (instrument panel extension)-upper	044B00-1
Bracket (instrument panel heater control opening cover mounting)	04528	Moulding (instrument panel extension)-upper center	044B04
Bracket (instrument panel to pillar)	04366-7	Moulding (instrument panel)-intermediate	04446-7
Bracket (instrument panel ventilator air control mounting)	04516-7	Moulding (instrument panel lower center)	04652
Clip (instrument panel cover retaining upper moulding)	04561	Moulding (instrument panel pad retaining)-top center	044B40
Clip (instrument panel pad retaining)-upper	044B96	Moulding (instrument panel upper cover retaining)	04296-7
Clip (instrument panel radio grille retaining)	04484	Moulding assy. (instrument panel)	04287-3
Clip (instrument panel safety pad retainer)	04278	Moulding ass'y. (instrument panel end upper cover retaining)	04264-5
Connector (vacuum door latch hose)	22035	Moulding assy. (instrument panel)-intermediate-R. H.	044B58
Cover (clock opening)	04428	Moulding assy. (instrument panel to windshield)	04332
Cover (heater control opening)	04428	Panel (instrument panel at cluster finish)-lower	04774-5
Cover (instrument panel finish panel)	045C32	Panel (instrument panel extension finish)	044B06-7
Cover (instrument panel heater control opening)	04496	Panel (instrument panel extension finish)-center	044B08
Cover (instrument panel radio access)	04640	Panel (instrument panel finish)	04338
Cover (instrument panel radio opening access)-bottom	04360	Panel (instrument panel finish end)	04392-3
Cover (instrument panel safety pad defroster opening flange)	045B52-3	Panel (instrument panel finish end-lower)	045C41
Cover and cap ass'y. (instrument panel ventilator air control opening)	04513	Panel assy. (instrument)	04320
Extension assy. (instrument panel)-lower	044A38-9	Panel assy. (instrument panel finish)-lower	044A10
Filler (instrument panel pad at speaker)	045D38	Panel assy. (instrument-upper)	04634
Grille (instrument panel radio)	04454	Plate (instrument panel end cover)	045A64-5
Grille assy. (instrument panel radio)	04405	Plate (instrument panel name)	04460
Key (ignition lock)-blank	22053	Plate (instrument panel radio dial hole)	04371
Kit (instrument panel safety pad attaching)	04200	Receptacle assy. (instrument panel ash)	04810
Kit (instrument panel vacuum disposal)	04813	Reinforcement (instrument panel)-upper	04790
Medallion (clock opening)	04428	Retainer (instrument panel extension upper moulding)	044B10
Moulding (instrument panel cover retaining upper)	04522-3	Retainer (instrument panel moulding)	04439
Moulding (instrument panel cover retaining upper)-center	04772	Retainer (passenger assist bar)	045B16-7
		Retainer assy. (instrument panel ash receptacle)	04826
		Retainer assy. (instrument panel pad)	04276-7
		Spacer (instrument panel pad defroster opening)	04468
		Spacer (instrument panel to brake pedal support)	04450
		Support (instrument panel)	045A50-1
		Support ass'y. (brake pedal)	01508

INDEX

LUGGAGE COMPARTMENT

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Accent stripe kit (luggage compartment door)	20000-1	Lift assy. (luggage compartment door hydraulic)	406A10
Anti-rattler (luggage compartment door torsion bar)	45028	Lift assy. (luggage compartment door)-less brackets	40654-5
Arm assy. (luggage compartment door check)	42754	Link (luggage compartment door lock actuating)	43226
Arm assy. (luggage compartment door counter balance spring)	42850-1	Lock assy. (luggage compartment door)	43200
Bar (luggage compartment door hinge torsion)	44890-1	Lockset (luggage & glove compartment door)-with keys	43507
Bracket (luggage compartment door check)	42790-1	Medallion (fuel filler pipe door)	25662
Bracket (luggage compartment door counter balance spring housing to floor)	41858	Motor and bracket assy. (upper back panel lift)	46752
Bracket (luggage compartment door hinge to wheelhouse)-lower	42744-5	Moulding (luggage compartment door)	42512-3
Bracket (luggage compartment door lift on door)	41836	Moulding (luggage compartment door)-lower	40104
Bracket (luggage compartment door lock nut mtg.)	40650-1	Nut and housing ass'y. (luggage compartment door lock)	40610
Bracket (luggage compartment door lock switch actuating lever pivot)	53948	Nut ass'y. (luggage compartment door lock)	432A34
Bracket (luggage compartment door lock vacuum actuator mounting)	432A36	Ornament (luggage compartment door)	53510
Bracket (spare wheel mounting)	47076	Ornament assy. (luggage compartment door)	42514
Bracket assy. (luggage compartment door bumper)	40130	Ornament assy. (luggage compartment door)	43500-4
Bracket ass'y. (luggage compartment door hinge to wheelhouse)	42704-5	Pad (luggage compartment door lock cylinder sleeve)	43625
Bracket assy. (luggage compartment door hydraulic lift to floor)	406A00	Pad (luggage compartment door ornament)	16675
Bracket assy. (luggage compartment door lock striker)	43235	Panel (luggage compartment door outside finish)	425A02
Bracket assy. (luggage compartment door lock transmission mounting)	406A04-5	Plate (luggage compartment door lock striker)	43252
Bumper (luggage compartment door counter balance spring arm stop)	41868	Plate (luggage compartment door name)	42528
Bumper (luggage compartment door inside)	43634	Plate assy. (name)-luggage compartment	42514
Bumper (luggage compartment door lock)	43348	Reinforcement (luggage compartment door hinge bracket)	424A70-1
Bushing (luggage compartment door lift mounting bolt)	427A42	Reinforcement (luggage compartment door opening)-drain trough	451A04-5
Bushing (luggage compartment door lock mounting bolt)	53916	Reinforcement (luggage compartment door opening)-side	279A62-3
Bushing (luggage compartment door torsion bar)-outer	448A06	Reinforcement (luggage compartment door opening upper corner)	44822-3
Cable (luggage compartment door lift drive)	53910	Retainer (luggage compartment door lock cylinder)	43629
Casing and cable ass'y. (luggage compartment door lock drive)	40670	Retainer (luggage compartment door lock sleeve)	43241
Clamp (luggage compartment door ski carrier hold down)	55008	Retainer (luggage compartment door ornament)	42522
Clip (luggage compartment door lock link)	43569	Retainer (luggage compartment door torsion bar)	448A02
Cover (luggage compartment door lock access hole)	43125	Retainer (luggage compartment door weatherstrip)	438A10-1
Cover (luggage compartment door lock keyhole)	43516	Retainer (luggage compartment door weatherstrip at seat back)	43818
Cover assy. (luggage compartment door lock key hole)	43514	Retainer assy. (fuel filler pipe door medallion)	25666
Cylinder assy. (luggage compartment door lock)	43279	Retainer assy. (luggage compartment moulding)	42527
Cylinder assy. (luggage or stowage compartment lock)	43505	Screw (luggage compartment door lock)	53536
Door assy. (luggage compartment)	40110	Shield (luggage compartment door lock striker)	432A70
Extension (luggage compartment door lock)	43283	Shield (luggage compartment door to filler)	403C50
Extension (luggage compartment door opening upper reinforcement)	44820-1	Sleeve (luggage compartment door lock mounting bolt bushing)	53917
Grommet (luggage compartment door lock)	43394	Sleeve assy. (luggage compartment door lock cylinder)	43603
Handle assy. (luggage compartment door)	43500	Spacer (luggage compartment door lock cylinder sleeve)	43535
Hose assy. (luggage compartment door hydraulic lift)	406A06-8	Spring (luggage compartment door lock key hole cover)	22006-7
Key (luggage & glove compartment door cylinder lock)	43562	Support (luggage compartment door hinge to body)	43567
Kit (luggage compartment door luggage carrier bracket & screw)	55078	Support (luggage compartment door lock nut mounting bracket)	42792-3
Kit (luggage compartment door luggage carrier hardware)	55100	Support (luggage compartment door lock nut mounting bracket)	43360-1
Kit (luggage compartment door luggage carrier pad & retainer)	55156	Support (luggage compartment door lock nut mounting bracket)	45528
Kit (luggage compartment door luggage or ski carrier)	55100	Transmission assy. (luggage compartment door lock)	40618-9
Kit (luggage compartment door luggage or ski carrier side rails)	55100	Trough (luggage compartment door lock)	427A44-5
Kit (luggage compartment door ski carrier adaptor)	55100	Trough (luggage compartment door opening)-front corner drain	45120-1
Letter (luggage compartment door)	40282	Trough (luggage compartment door opening)-lower corner drain	45118-9
Lever (luggage compartment door lock operating)	43358	Trough (luggage compartment door opening)-lower corner drain-rear	451A02-3
		Trough (luggage compartment door opening)-upper corner drain	45120
		Trough assy. (luggage compartment door opening)-lower corner	451A00-1
		Washer (luggage compartment vacuum door lock transmission mounting)	43366
		Weatherstrip assy. (luggage compartment door)	43720-1

INDEX

PACKAGE TRAY

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Bracket (package tray strainer to inner roof rail)	46632-3	Panel (package tray-lower)	46519
Bracket (package tray strainer to wheelhouse)	46608-9		
Bumper assy. (package tray to luggage compartment door)	46679	Panel assy. (package tray)	46506
Button (package tray)	54460	Panel assy. (package tray end)-rear	46822-3
		Panel assy. (package tray trim)	46668
Connector (ventilator air register damper motor hose)	019A86	Panel assy. (package tray trim)-S(63A)	46668
Coupling (package tray lift assy. to motor)	46593	Plate (package tray center)	46654
		Plate (package tray end)	46652-3
Cover (package tray to roof side trim)	03496	Retainer (package tray balance link opening seal)	46420
			465A08-9
Extension (quarter trim panel to package tray)	310A62-3	Retainer (package tray on body)-outer moulding	46552
		Retainer (package tray trim panel)	54460
Hose (ventilator air register damper motor)	019A88	Retainer assy. (package tray finish moulding)	46858
Moulding (package tray finish)-end	465A04-5	Seal(package tray balance link opening)	46418-9
Moulding (package tray finish)-intermediate	465A00-1	Seal assy. (package tray)-side	46640-1
Moulding assy. (package tray on body)-rear	46530-1		465A10-1
		Strainer (package tray to floor)	46610-1
Panel (package tray)	46510	Support (package tray rear moulding)	46752-3
Panel (package tray)-end	46514-5	Support (package tray trim panel)	46802
Panel (package tray end)-front	46906-7		
	46918-9	Weatherstrip assy. (package tray panel)	46740

PILLAR - CENTER

Bracket (center body pillar to roof rail)	24574	Panel (center body pillar inside finish)-upper	24356-7
Bumper (door)	20122-5	Panel (center body pillar inside garnish)-upper or lower	24346-7
	24630-1	Pillar assy. (center body)	24300-1
		Plate (front body pillar hinge)	02666
Cap (center body pillar finish)	24452-3		
		Reinforcement assy. (center body pillar)-lower	24426-7
Fastener (center body pillar inside finish panel)	24495	Reinforcement (center body pillar to roof rail)	24312
		Reinforcement (center body pillar)-upper	24384-5
Moulding (center body pillar outside)-upper	24458-9		
Moulding ass'y. (center body pillar outside)-lower-73B, 73C, 79B	24470-1	Spacer (center body pillar adjustable)	11434-6
		Trim assy. (center body pillar)	24446-7

QUARTER

Anti-squeak (rear corner pillar)	41078	Bracket (quarter window stop)-upper	29998-9
Baffle (quarter panel fuel filler pipe)	11104	Bracket (quarter window stop)-upper rear	21772
Box and snuffer assy. (quarter panel ash receptacle)	04821	Bracket and hinge assy. (quarter window)	29976-7
Brace (body rear corner panel)	28442		
Brace (quarter lock pillar)	28268-9	Bracket assy. (quarter window front guide upper)	298A30
Brace (quarter panel to wheelhouse)	27830-1	Bracket assy. (quarter window glass run retainer)	30046
Brace assy. (quarter panel lock pillar to floor)	28198-9	Bracket assy. (quarter window guide support to floor side member)-outer	30012
		Bracket ass'y. (quarter window regulator stabilizer arm)	30244
Bracket (quarter lock pillar to roof rail)	28360-1	Bracket assy. (quarter window regulator upper stop)	303A00-1
Bracket (quarter panel fuel filler opening lid bumper)	28641	Bracket assy. (quarter window upper glass run support)	30169
Bracket (quarter panel to corner pillar upper reinforcement)	29346-7		
Bracket (quarter panel to wheelhouse brace)	291B745	Bumper (door)	20122-5
Bracket (quarter power window regulator lower stop)	29982-3		24630-1
Bracket (quarter window front guide)-lower	298A36	Bumper (quarter panel fuel filler opening lid)	28631
Bracket (quarter window hinge)-on body	29932-3	Bumper (quarter window stop)-inner	29994
Bracket (quarter window regulator housing mounting)	303A62	Bumper (quarter window stop)-outer	29986
Bracket (quarter window regulator panel to trim panel)	30308	Bumper assy. (quarter power window regulator lower stop)	29844

INDEX

QUARTER - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Cap (quarter belt breakover)-front	278A02-3	Guide & bracket assy. (quarter window)-rear	29782-3
Cap (quarter wheelhouse trim panel moulding)	290B60-1	Guide assy. (quarter window)	29764-5
Channel (quarter window)-upper	30514	Guide assy. (quarter window actuator)	303A30-1
Channel ass'y. (quarter glass)	29900-1	Guide assy. (quarter window)-front	29752-3
Channel ass'y. (quarter window front guide)	29820	Guide assy. (quarter window regulator equalizer arm)	30298-9
Channel ass'y. (quarter window)-lower	29958-9	Guide assy. (quarter window regulator link)	303A58-9
Channel ass'y. (quarter window)-top and side	29962-3	Gusset (quarter belt rail to wheelhouse)	290B42-3
Clip (quarter arm rest)	31662	Gusset (quarter panel to body rear side upper panel)	278B12
Clip (quarter window moulding-outer frame set)	42450	Gusset (quarter wheelhouse inner panel to drain trough)	278B06-7
Clip (spare wheel well cover panel)	47154	Handle ass'y. (quarter window)	30322
Clip assy. (quarter window outside front outer moulding)	29100	Hook (quarter coat)	29024-5
Coupling (quarter power-lift window regulator)	23279	Housing assy. (fuel tank filler pipe)	27936
Coupling (quarter power-lift window regulator drive)	23440	Housing ass'y. (quarter panel fuel tank filler pipe)	27923
Cover (quarter panel name plate stud)	290B76	Housing assy. (quarter window regulator)	303A46-7
Cover (quarter panel wheel opening)-kit	27964	Insert (quarter panel outside lower & upper ornament center)	290C80-3
Cover (quarter window regulator handle screw)	23362	Kit (quarter panel wheel opening cover)	27964
Drive ass'y. (quarter power-lift window regulator)	23394-5	Kit (quarter power-lift window regulator, drive and coupling)	30302-3
Drive assy. (quarter window power - lift regulator)	30304-5	Kit (quarter window regulator drive gear)	234A24
Escutcheon (quarter window regulator handle)	303A20	Knob (quarter window regulator handle)	23352
Extension (quarter inside to floor pan)	28750-1	Lid assy. (quarter panel fuel tank filler pipe)	28611
Extension (quarter panel center rear)	28596-7	Medallion (quarter panel)	25662
Extension (quarter panel lock side outer reinforcement)	28238-9	Moulding (front quarter window garnish upper)-front & rear	290A54-7
Extension (quarter panel)-lower-rear	28058-9	Moulding (quarter belt garnish)	29380-1
Extension (quarter panel to lower back panel)	27838	Moulding (quarter lock pillar finish)	291A58-9
Extension (quarter panel)-upper rear	28072-3	Moulding (quarter lower extension)	291B18-9
Extension (quarter panel upper to rear corner pillar lower reinforcement)	28206-7	Moulding (quarter lower rear extension)-lower	290B30-1
Extension (quarter panel window regulator)	30306	Moulding (quarter)-outside	29058-9
Extension (quarter trim panel)-upper	310A32-3	Moulding (quarter outside belt)-center	290A88-9
Extension (quarter wheelhouse)-front	27950-1	Moulding (quarter outside belt)-rear	29138-9
Extension (quarter window front guide to actuator guide)	29979	Moulding (quarter outside finish panel)	290B56-7
Extension (quarter window outside front moulding)	290A06-7	Moulding (quarter outside front belt moulding)-end	29193
Extension (quarter window regulator panel)	30484-5	Moulding (quarter outside)-upper	29068-9
Extension (rear corner lower pillar)	41054-5	Moulding (quarter outside upper rear end)	29292-3
Extension assy. (quarter panel upper rear)	27702-3	Moulding (quarter outside upper rear extension)	290C26-7
Extension assy. (quarter window guide brace)	30416-7	Moulding (quarter panel fuel tank filler pipe lid finish panel)	28698
Fastener assy. (quarter outside finish rail)	50108	Moulding (quarter panel lower)-rear	291A22-3
Filler (front quarter window opening rear corner)-upper	290B32	Moulding (quarter panel)-outside	29034-5
Filler (quarter lock pillar to reinforcement)	29650-1	Moulding (quarter panel outside finish panel)-rear upper rear	291A50-1
Filler (quarter panel extension to rear corner pillar)	28438-9	Moulding (quarter panel outside rear end)	291A50-1
Filler (quarter panel lower)-rear	28376-7	Moulding (quarter panel outside)-upper	29140-1
Filler (quarter panel)-upper front	28034-5	Moulding (quarter panel outside upper rear corner)	28982-3
Filler (quarter trim panel to rear seat cushion)	28060-1	Moulding (quarter wheel opening)	29164-5
Filler (quarter trim panel to wheelhouse)-L. H.	31106-7	Moulding (quarter wheelhouse trim panel)	290B22-3
Filler (quarter trim panel to wheelhouse)-R. H.	31383	Moulding (quarter wheelhouse trim panel front)	290B40-1
Filler (quarter window opening)-rear corner	31234	Moulding (quarter window garnish)	28994-5
Filler (rear quarter window opening front corner)-lower	29458-9	Moulding (quarter window garnish)-upper front	29004-5
Filler assy. (qtr. window outside front mldg.)-lower	29436-7	Moulding (quarter window outside front)	29014-5
Finish strip (quarter window)	29888-9	Moulding (quarter window outside front outer)	29856-7
Finish strip ass'y. (quarter window)	29004-5	Moulding (quarter window outside upper)	290A66-7
Finish strip ass'y. (quarter window)-upper	29002-3	Moulding (rear quarter window garnish)-lower	290B92-3
Frame (quarter window)	29000-7	Moulding (rear quarter window garnish lower rear)	290A60-1
Frame ass'y. (quarter window glass)	305A16-7	Moulding (rear quarter window inside upper corner)	291A88-9
Frame ass'y. (quarter window)-top and side	30504-5		291A30-1
	29962-3		
Gasket (quarter power window regulator drive)	234A20		
Gear assy. (quarter window regulator)	303A68		
Glass (quarter window rear)-L. H.	29736		
Glass (quarter window rear)-R. H.	29726		
Glass (rear quarter window)	29710-1		
Glass ass'y. (quarter window)-rear	29740-1		
Guard ass'y. (body side)	25048-9		

INDEX

QUARTER - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Moulding (rear quarter window outside front)	291A10-1	Pillar ass'y. (rear corner)	41032-3
Moulding (rear quarter window outside)-upper	290A62-3	Pillar ass'y. (rear corner)-lower	41022-3
Moulding & weatherstrip assy. (quarter window outside rear)	29396-7	Pillar assy. (rear corner)-outer & inner	412A04-7
Moulding ass'y. (quarter arm rest)	31796-7	Pillar ass'y. (rear quarter lock)	28160-1
Moulding assy. (quarter lower rear extension)	291B60-1	Pin (quarter window frame hinge)	30556
Moulding ass'y. (quarter outside belt)	29022-3	Plate (outside name) "Country"	20978
Moulding ass'y. (quarter outside)-lower front	29076-7	Plate (quarter window hinge retaining)	30344-5
Moulding assy. (quarter panel extension)	29078-9	Plate (quarter window regulator and door handle)	23370
Moulding assy. (qtr. panel outside lower rear extension)	29312-3	Plate (quarter window regulator handle)	29191
Moulding assy. (quarter panel outside upper rear end)	29246-7	Plate assy. (quarter window side support)	29876
	291A24-5		
Moulding assy. (quarter trim)-center	31122-3	Rail (quarter belt)-inside	28714-5
Moulding assy. (quarter trim)-lower	31214-5	Rail (quarter belt side)	41736-7
Moulding assy. (quarter trim panel)	290A42-3	Rail (quarter belt side)-front	41708-9
		Rail (quarter outside finish)-lower	290A68-9
Moulding ass'y. (quarter window garnish)	29002-3	Rail (quarter panel belt)-rear	28716-7
Moulding ass'y. (quarter window garnish)-lower	29016-7	Rail (quarter panel extension outside finish)	28530-1
Moulding assy. (quarter window outside)-rear	290B52-3	Rail (quarter panel extension outside finish)-lower	29000-1
Moulding ass'y. (quarter window garnish)-upper	29006-7	Rail (quarter panel outside finish)-upper	290A40-1
Moulding assy. (rear lamp opening)	279A64-5	Rail and reinforcement assy. (quarter belt)	279B68
Moulding assy. (rear quarter window garnish front)	291A60-1	Rail and support assy. (roof luggage carrier)	55104-5
Moulding assy. (rear quarter window garnish rear)	291A84-5	Rail ass'y. (quarter belt side)	41732-3
Moulding assy. (rear quarter window garnish)-upper	290A14-5	Rail assy. (quarter outside finish)	28712-3
Moulding assy. (rear quarter window outside)-rear	291A32-3		
Numeral (quarter panel outside)	291B30-1	Receptacle assy. (quarter ash)-includes cover	30702-3
		Receptacle assy. (quarter ash)-less cover	30712
Ornament (quarter panel)	28984-6	Regulator assy. (power-lift window)-less motor, etc.	30380-1
		Regulator ass'y. (rear quarter window) -manual	30306-7
Ornament (quarter panel)-lower back corner	291A52-3	Reinforcement (quarter body lock pillar)-upper	28176-7
Ornament (qtr. panel)-rear -includes attaching parts	27915-9	Reinforcement (quarter lock pillar)	28364-5
	290A76-7	Reinforcement (quarter outer panel)-lock side	28200-1
		Reinforcement (quarter panel lock side)-lower	28216-7
Panel (quarter)	27846-7	Reinforcement (quarter panel lock side)-upper	28208-9
Panel (quarter inside lining)-upper	31070-1	Reinforcement (quarter panel rear extension)	280B06-7
Panel (quarter lock pillar)-lower outer-repair	281A08-9	Reinforcement (quarter panel tail lamp opening)	27970
Panel (quarter)-lower center-repair	280B70-1	Reinforcement (quarter panel upper rear)	28538-9
Panel (quarter)-lower front-repair	27846-7		
Panel (quarter lower rear extension finish)	29158-9	Reinforcement (quarter trim lower front panel)	310A86-7
Panel (quarter outside finish)	24730-1	Reinforcement (qtr. wheelhouse outer pillar to roof)	279B00-1
	27866-9	Reinforcement (quarter window channel front upper corner)	26290
	290B10-1	Reinforcement (roof luggage carrier slot)	55124
Panel (quarter panel inside)-front	278A08-9	Reinforcement assy. (quarter lock pillar)-lower	28128-9
Panel (quarter panel inside)-rear	278A10-1	Reinforcement assy. (quarter outer panel)-lock side	28200-1
Panel (quarter panel inside to floor pan)	27858-9	Reinforcement assy. (rear lamp opening)	27776-7
Panel (quarter panel upper front)	28516-7		
Panel (quarter)-rear lower rear-repair	27850-1	Retainer (fuel filler opening collar boot)	280B22
Panel (quarter trim finish)	310A02-3	Retainer (quarter arm rest base cover)	240A14
Panel (quarter trim)-lower front	31722-3	Retainer (quarter lower moulding)-outside	21020
Panel (quarter)-upper	27854-5		29144
Panel (quarter wheelhouse)-inner	27886-7	Retainer (quarter outside front belt moulding)	29128
Panel (quarter wheelhouse)-outer	27894-5	Retainer (quarter outside to lower back panel)	29098-9
Panel (quarter window opening)	278B28-9	Retainer (quarter panel outside moulding)	21060-6
Panel (side lining)-lower front	27948-9		20818
Panel (side lining)-lower rear	27954-5	Retainer (quarter panel to package tray weatherstrip)	278B78-9
		Retainer (quarter pillar windlace)-lower	31346-7
Panel assy. (quarter outside finish)	290B12-3	Retainer (quarter trim panel)	31066-7
Panel assy. (quarter panel inside to floor pan.)	27856-7	Retainer (quarter trim panel)-at belt rail	31481
Panel assy. (quarter panel wheel opening cover)	27974-5	Retainer (quarter trim panel)-front	31067-8
Panel assy. (quarter regulator)	27870-1	Retainer (quarter trim panel to rocker panel)	31232
Panel assy. (quarter wheelhouse)	27882-3	Retainer (quarter trim panel water shield)	31240-1
		Retainer (quarter vent window weatherstrip)	30228-9
Pillar (quarter lock front)	28178-9	Retainer (quarter wheelhouse trim)	31494-5
Pillar (quarter lock upper)-outer	28324-5	Retainer (quarter window front guide roller)	30492
Pillar (quarter wheelhouse to roof)-inner & outer	278A36-9	Retainer (quarter window garnish moulding)-rear	29308
Pillar (quarter wheelhouse upper to roof)-inner	279B02-3		
Pillar (rear corner inner front center)	412A32-3		

INDEX

QUARTER - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Retainer (quarter window lower front moulding)	291A90-1	Spring (quarter power-lift window regulator counterbalance)	30351
Retainer (quarter window opening panel)-lower	27972-3	Spring (quarter window regulator arm roller)	23243
Retainer (quarter window rear weatherstrip)	29980-1	Spring (quarter window regulator handle)	22624
Retainer (quarter window stationary glass)-upper front	30130	Star (quarter trim panel)	23932
Retainer (rear quarter window front moulding)	291A94	Stop (quarter window)-front guide	29814-5
Retainer (rear quarter window lower rear moulding)	291A92-3	Stop assy. (quarter window)	29968
Retainer (rear quarter window outside front moulding)	291A12	Stop assy. (quarter window)-lower	29805
Retainer assy. (moulding)-includes clip-Universal	21094	Stop assy. (quarter window regulator arm)	29822
Retainer ass'y. (quarter ash receptacle)	30714	Strainer (lower quarter panel front)	280A50-1
Retainer ass'y. (quarter moulding)-outside	29120	Strainer (quarter panel) -rear	279B98-9
Retainer assy. (quarter outside finish panel moulding)	21094-5	Strainer ass'y. (quarter panel belt to floor)	28788-9
Retainer assy. (quarter outside lower moulding)-rear	290B78	Strainer assy. (quarter panel belt to quarter)	280A14-5
Retainer assy. (quarter outside upper moulding)	290B82	Strainer assy. (qtr. panel belt to spare wheel well)	28534
Retainer assy. (quarter panel medallion)	29108	Strainer assy. (qtr. window opening panel)-center	278B88
Retainer assy. (qtr. panel outside rear end moulding)	25666	Strainer assy. (quarter window opening panel)-front & rear	278B70-2
Retainer assy. (quarter pillar windlace)-lower	29185	Strap ass'y. (assist)	31406
Retainer assy. (quarter spear front moulding)	310A08-9	Strip (quarter window glass retaining)	29724
Retainer assy. (quarter wheel opening moulding)-rear	290C64	Strip assy. (belt side front tacking)	41772-3
Retainer assy. (quarter window glass run)	291B68	Strip assy. (belt side rear tacking)	41782-3
Retainer assy. (quarter window guide button)	29734-5	Strip assy. (quarter wheelhouse cover)	310A24-5
Retainer assy. (quarter window to guide)	30370	Stud (quarter window guide roller)	29825
Roller (quarter window guide)	30426-9	Support (quarter window weatherstrip to reg. panel)	29992
Roller assy. (quarter window regulator arm)	29824	Transfer (graining)-"Country Squires"	20748
Run (quarter window glass)	298A46-8	Trough (quarter inside panel front drain)	405A02
Run assy. (quarter window glass)-rear	23240	Weatherstrip (qtr. panel at wheelhouse)-lower baffle	28132
Run assy. (quarter window glass)-upper	30048	Weatherstrip (quarter window finish strip)	29744-5
Run ass'y. (quarter window glass)-upper front	29522-3	Weatherstrip (quarter window)-front	30146-7
Seal (quarter lock pillar to window frame)	30008-9	Weatherstrip (quarter window glass)-inner	29744-5
Seal (quarter panel to package tray panel)	30010	Weatherstrip (rear quarter window)	29904-5
Seal (quarter panel wheel opening cover)	3010A-5	Weatherstrip and retainer assy. (quarter window)-outer upper	29920-1
Shield (quarter panel fuel filler overflow)	28182	Weatherstrip assy. (quarter lock pillar)-upper front	28306-7
Shield (quarter trim water)	27738-9	Weatherstrip ass'y. (qtr. wind.) front-lower corner	29748
Spacer (front quarter window opening) -inside panel	27986-7	Weatherstrip assy. (quarter window glass)-inner & outer belt	29742-3
Spacer (quarter outside center belt moulding)	28622	Weatherstrip assy. (quarter window)-outer	29732-3
Spacer (quarter power-lift window regulator drive worm)	31090-1	Weatherstrip assy. (rear quarter window)	298A02-3
Spacer assy. (quarter window opening panel to pillar)	20318	Wheelhouse assy. (quarter)	27882-3
	27884	Window (rear quarter)	29710-1
	290B16		
	23590		
	278B80		

ROOF

Absorber (roof panel sound)	54330	Clamp assy. (roof hold down)-front	50508
Bow (roof luggage carrier)	55118	Clamp assy. (roof hold down)-side	50500
Bracket (rear roof rail outer extension)	513B46-7	Clip (ski carrier hold down clamp retaining)	55020
Bracket (roof side outer rail)	513B56-7	Container ass'y. (roof sunshade curtain)	30124
Bracket (upper back panel brace to roof rail)	403E18-9	Cover (roof drip finish moulding joint)-front	51792
Cap (roof headlining support)	52126-7	Cover (roof drip moulding joint)-front	51762
Cap (roof luggage carrier rail finish)	55182	Cover (roof drip moulding joint)-rear corner	51798-9
Carrier (roof luggage)-kit	55100	Cover (roof side inner moulding joint)	51744
Carrier assy. (ski)-less side rails	55004	Cover assy. (front roof control)	53596-7
Clamp (roof ski carrier hold down)	55008	Cover assy. (roof glass garnish moulding)-rear corner	50048-9
Clamp and strap assy. (ski carrier)	55006	Cover assy. (tonneau)	501A34

INDEX

ROOF - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Escutcheon (tonneau cover footman loop)	54814	Ornament (roof outside)-side	50286-7
Extension (front roof rail outer)	513A62-3	Ornament (roof side)-center	517A28
Extension (rear roof outer rail to wheelhouse)	52562-3	Ornament (roof side)-inner	517A00-1
Extension (roof headlining support)	52133	Ornament (roof side)-outside	517A20-1
Extension (roof outside side moulding)-rear	517A50-1	Ornament and medallion assy. (roof side)	517A18
Extension (roof panel rear)	50847	Ornament assy. (roof side)-outside	517A56-7
Extension (roof panel to back window frame)-side	50282-3		
Extension (roof side inner rear rail)	51220-1	Pad (roof luggage carrier slot)	55147
	513A34-5	Pad (ski carrier bottom support)	55028-9
Extension (roof side outer rear rail)	51206-7	Panel (roof)	50202
Extension (roof side rail rear)-inner	513A04-5	Panel (roof side)-inside rear	51982-3
Extension assy. (roof side rear rail to wheelhouse)	513A86-7	Panel assy. (roof)	50200-2
	513A44-5	Panel assy. (roof side ornament)	50302-3
Fastener assy. (roof hold down clamp)-rear	50590		517A32-3
Fastener assy. (roof luggage carrier)-Wagons	55014	Plate (folding top hold down clamp latch)-front	50530
		Plate (roof hold down clamp latch)-front	50530
Gear (roof lock drive)	53523	Plate (roof side name)	50399
Guide assy. (roof sliding panel)	502C10	Plate assy. (roof hold down side clamp latch)	50502-3
		Plate assy. (tonneau cover adjustment)	501A14
Kit (roof luggage carrier)	55100		
Kit (roof luggage carrier assy. mounting)	55100	Rail (front side)	53104-5
Kit (roof luggage carrier bracket & screw)	55078	Rail (roof luggage carrier)-front & rear	55106
Kit (roof luggage carrier hardware)	55100	Rail (roof luggage carrier)-rear	55138
Kit (roof luggage carrier hold down strap assy.)	55196	Rail (roof luggage carrier)-side	55114
Kit (roof luggage carrier side rail mounting)	55100	Rail (roof)-side	51184-5
Kit (roof ski carrier adaptor)	55100	Rail (roof side drip)	51700-1
Kit ("Starliner" roof)	50202	Rail (roof side inner center)	51226-7
			513A36-7
Lifter assy. (roof sliding panel)	502B48-9	Rail (roof side inner center lower)	51652-3
Link ass'y (folding top power) -lower	50356-7		513A50-1
		Rail (roof side inner)-rear	513A18-9
Medallion (roof side)	25662	Rail (roof side inner rear)-upper	51618-9
Medallion assy. (roof side)-outside	517A22	Rail (roof side)-outer-front	51186-7
			513A12-3
Moulding (roof drip finish)-front	51718-9	Rail (roof side)-outer-rear	51216-7
Moulding (roof drip finish)-side	5172C-7		513A16-7
Moulding (roof drip finish)-side-rear	51728-9	Rail ass'y. (roof side front inner)	51180-1
Moulding (roof drip rear corner)	517A82-3	Rail ass'y. (roof side)-inner	51212-3
Moulding (roof drip rear finish)	517A46	Rail assy. (roof side inner front)	513A38-9
Moulding (roof drip side finish)-front	517A54-5	Rail assy. (roof side inner rear lower)	513A42-3
Moulding (roof drip side finish)-rear corner	517A48-9	Rail assy. (roof side inner rear)-upper	513B24-5
Moulding (roof glass)-outside-side	50062-3		
Moulding (roof outside belt)-rear	50402-3	Ramp (roof sliding panel lifter)	502B54
Moulding (roof outside)-rear	50044	Reinforcement assy. (roof panel)-center	50244
	517A36-7	Reinforcement assy. (roof panel)-front	50222
Moulding (roof outside rear center)	50044		50283
Moulding (roof) outside-side	517A16-7	Reinforcement assy. (roof panel)-rear	50217
Moulding (roof side finish)	51628-9		50291
Moulding (roof side)-inner front	51752-3	Reinforcement (roof panel center)	50290
Moulding (roof side inner rail)-rear	517B46-7	Reinforcement (roof side outer rear rail)	513B34-5
Moulding (roof side)-inner-rear	51754-5		
		Retainer (roof header weatherstrip)-end	51356-7
Moulding (tonneau cover)-front corner	501A54	Retainer (roof headlining)	52146-7
Moulding (tonneau cover)-front inner	501A60-1	Retainer (roof headlining)-side or rear corner	52136-9
Moulding (tonneau cover front moulding)	501A68	Retainer (roof headlining support)	52182
Moulding (tonneau cover front moulding)-end	501A70	Retainer (roof outside belt moulding)	51842
Moulding (tonneau cover)-front outer	501A62-3	Retainer (roof outside cover)	53729
Moulding (tonneau cover)-rear	501A64	Retainer (roof outside rear side moulding)	50030
Moulding (tonneau cover)-side	501A50	Retainer (roof outside side front moulding)	50024-5
		Retainer (roof side medallion)	04540
Moulding assy. (roof outside)-belt	517A04-5	Retainer (roof side ornament)	517A08
Moulding assy. (roof outside vinyl cover)-rear side	517A02	Retainer (roof side rail weatherstrip)	513A66-7
Moulding assy. (roof side rail)-inner	513B42-3		513A28-9
		Retainer (roof side rail weatherstrip rear corner)	51246
Nut assy. (front roof lock)	53510		

INDEX

ROOF - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Retainer (roof side rear trim foundation)	519A16	Spacer (rear roof side inner front moulding)	51775
Retainer (roof side weatherstrip cap)	513B36-7	Spacer (roof outside rear moulding)	517A68
Retainer (roof to upper back panel outer weatherstrip)	50396-7	Strap assy. (roof luggage carrier hold-down)-Kit	55196
Retainer (roof vinyl cover)-front	53716	Strip (roof headlining header retaining)	52202
Retainer (roof vinyl cover)-front corner	53730	Strip (roof headlining retaining)	50952-3
Retainer (roof vinyl cover)-side	53729	Strip (roof headlining side retaining)-front corner	50934-5
Retainer (ski carrier)	55052	Strip (roof headlining side retaining)-rear lower	50900
Retainer(tonneau cover to body)-rear	501A36	Strip assy. (roof headlining header tacking)	51016-7
Retainer assy. (hard top medallion)	25666	Strip assy. (roof headlining side retaining)-front	50936-7
Roof repair (hard top)-kit	50223	Strip assy. (roof headlining side retaining)-rear	50940-1
Screw (front roof lock)	53536	Support (roof headlining)	52101-10
Seal (roof side inner front moulding)	517B30	Support (roof luggage carrier)	55140
Seal (sliding roof panel rear)	502C76	Support (roof sliding panel front air deflector)	502B92
Slat assy. (roof luggage carrier)-inner & outer	55150-2	Weatherstrip (rear roof)-rear	51322
Slat assy. (roof luggage carrier)-outer	55022	Weatherstrip (roof sliding panel)-front	502C50
Sleeve (rear roof back mounting bolt bushing)	53917	Weatherstrip (roof sliding panel)-intermediate	502C51
Spacer (rear roof assist spring guide mounting)	53919	Weatherstrip (roof sliding panel)-rear	502C12
		Weatherstrip ass'y. (roof side rail)	51222-3

SEAT - AUXILIARY

Arm assy. (auxiliary seat back floor pivot)	60830-1	Panel ass'y. (auxiliary seat back)-floor board-front	60940
Belt assy. (auxiliary seat complete)	613B84	Panel ass'y. (auxiliary seat back)-floor board-rear	60942
Bracket (auxiliary seat back support)	600A74-5	Prop ass'y. (auxiliary seat back)	60930
Bumper assy. (auxiliary seat back floor panel)	605A18	Retainer (auxiliary seat cushion floor)-front	507A46
Bumper (auxiliary seat back floor pivot arm)	61506	Stop (auxiliary seat back floor)	606A22
Hinge ass'y. (auxiliary seat back floor board panel)	30928	Support assy. (auxiliary seat back)	600A76-7
Latch assy. (auxiliary seat back floor)	61142	Support assv. (auxiliary seat back floor latch)-outer	61507

SEAT - FRONT

Actuator assy. (front seat back adjusting)	610A02	Cover (front seat back pivot side)	61692-5
Bar (front seat track tie)	61726-7	Cover (front seat head rest trim)	610B40
Bar assy. (4-Way power seat track horizontal equalizing)	61842	Cover (front seat track motor)	618B76
Bar ass'y. (4-Way power seat track vertical equalizing)	J1832	Cover (power seat adjusting regulator housing)	617A16
Bearing (power seat adjusting regulator housing)	617A18	Cover assy. (4-way power seat regulator)	60481
Bearing (power seat adjusting regulator needle thrust)	617A26	Extension (front seat cushion side shield)	62198-9
Bearing (power seat adjusting regulator screw)-rear	617A20	Frame assy. (front seat back head rest)	610A34
Belt and tongue (front seat safety)	61136	Gasket (4-Way power seat regulator cover)	60467
Belt Kit (front seat safety)-center	61200	Gear (4-Way power seat regulator)	60419
Bolt (front seat belt anchor eye)	61212	Gear (power seat adjusting regulator)	617A15
Bolt (front seat track tie rod eye)	61730	Handle (front seat back adjusting)	61198
Boot (front seat belt anchor bolt)	61140	Handle (front seat track adjusting)	61755
Boot (front seat belt retractor)	61140	Handle ass'y. (front seat track adjusting)	61753-4
Boot (roll bar interior trim)	61218	Handle assy. (seat track vertical adjusting)	61754
Boot and retainer kit (front seat belt)	611A32	Hook (front seat track release cable)	619A02
Bracket (4-way power seat regulator)-rear	60455	Hook assy. (seat belt)	61280
Bracket (front seat head rest mounting)	610A80	Housing assy. (4-Way power seat regulator)	60402-3
Bracket (front seat track assist spring)	61804	Housing assy. (power seat adjusting regulator)	617A30
Cable assy. (front seat back adjusting)	610A84	Insert (front seat back center)	61622
Cap (roll bar end)	61218	Kit (manual 4-way tilt seat track assy.)	61700
Clip (front seat back adjusting actuator cable inner)	610A28	Kit (seat safety belt)-front or rear seat	61200
Clip (front seat back adjusting actuator cable outer)	610A46		
Clutch (power seat adjusting regulator)	617A36		
Coupling (4-way seat adjuster motor to shaft)	60487		
Coupling (front seat adjuster transmission drive)	618A59		
Coupling (power seat track regulator drive)	619A32		

INDEX

SEAT - FRONT - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Link (power seat track regulator to horizontal equalizer bar)	62003	Retractor assy. (front seat belt)	610A88
Link (power seat track vertical adjusting bar)	61854	Retractor kit (front seat belt)	611A06
Link assy. (power seat track vertical adjusting bar)	61926	Rod assy. (front seat track vertical lift release control)-Manual 4 Way tilt seat	617A66
Loop (front seat belt restricting)	61222	Rod assy. (seat track tie)	61802
Moulding (front seat cushion side shield)	61410-1	Screw ass'y. (power seat adjusting horizontal reg.)	60428
Moulding assy. (front seat back)	65206	Screw assy. (power seat adjusting vertical regulator)	617A02 60449
Nut assy. (power seat adjusting regulator)	619A66	Seat belt kit (safety)	617A06 61200
Ornament (front seat back)	64824	Shaft (power seat adjusting regulator worm gear)	617A17
Pad (front seat back head rest support)	610A52	Shaft assy. (4-way power seat regulator)-horizontal	60477
Pad (front seat cushion)	63222	Shield (front seat back rear)	61616
Pad (front seat cushion center)	63277	Shield (front seat back side)	61616-7
Pad assy. (front seat back head rest)	610A60	Shield (front seat cushion side)	62186-7
Pad assy. (front seat cushion lower)	63245	Shield (front seat track)	62162-3
Panel & cover assy. (passenger reclining seat head rest rear)	610A72	Sleeve (front seat back hinge pivot)-inner & outer	61696-7
Panel assy. (front seat back rear trim panel insert)	60762	Solenoid & plunger repair kit (power seat adjusting nut)	61925
Plate (front seat back ornament mounting)	64825	Spacer (front seat back pivot arm)	60394
Plate (front seat back scuff)	61642	Spacer (front seat track reinforcement-to floor)	617B68
Plate assy. (front seat back hinge)	60064	Spacer (front seat track-to floor support)	62016
Race (power seat adjusting regulator needle thrust bearing)	617A22	Spring (front seat back head rest guide rod)	610A04
Receptacle ass'y. (front seat back ash)	62876	Spring (front seat belt retractor)	610A98
Regulator assy. (front seat 4-way power)	617A01	Spring (front seat track assist.)	61828
Reinforcement (front seat belt anchor to side member)	61216	Spring (front seat track horizontal assist)	617A69
Reinforcement (front seat track)	617A46	Spring (front seat track latch)	61883
Reinforcement (front seat track stabilizing)	61844	Spring (front seat track vertical lift gear latch)	617A52
Reinforcement assy. (front seat belt anchor to floor pan)	61216	Spring assy. (front seat back)	64700-1
Reinforcement assy. (front seat track)	617B70-1	Stop (front seat back)	61064
Reinforcement assy. (front seat track to floor pan)	61216	Support (front seat back side shield)-lower	62296-7
Reinforcement assy. (seat support to floor pan)	617B00	Support (front seat cushion side shield)-center	62190
Retainer (front seat back adjusting cable)	610A30	Support (front seat cushion side shield)-front	62168-9
Retainer (front seat back button & strap)	63520	Support (front seat cushion side shield rear)	62194-5
Retainer (front seat back pivot side outer cover)	61638-9	Support (passenger's seat)-front	62554-5
Retainer (front seat track adjusting handle)	618B58	Support (passenger seat)-rear to floor	62537
Retainer (passenger reclining seat back lower corner-trim)	611A44-5	Track assy. (seat)	61704-5
Retainer assy. (front seat back ash receptacle)	62868	Yoke and roller assy. (power seat adjusting regulator)	617A76
		Yoke assy. (power seat adjusting regulator clutch)	60510

SEAT - REAR

Anti-rattler (rear seat back latch)	61336	Bumper (rear seat back)	61333
Anti-rattler assy. (rear seat back floor extension panel)	61325	Bumper (rear seat back latch handle stop pin)	62430
Bar (rear seat cushion torque)	606A38-9	Bumper (rear seat cushion panel)	61339
Bearing (rear seat back latch handle)	61346	Bumper (rear seat cushion to spacer)	60578
Belt (rear seat shoulder harness)	60126	Button (rear seat back)	60757
Bolt (rear seat belt anchor eye)	61212	Clip (rear seat back floor support retaining)	64824
Bracket (rear seat back floor extension panel)	61314	Clip (rear seat back latch)	605A68
Bracket (rear seat back spring hanger)	667A02	Cover (rear seat back panel)	613A90
Bracket (rear seat back stop to wheelhouse)	631A03	Cover (rear seat back stop support)	60570-1
Bracket (rear seat back strainer to floor)	46842-3	Cover (rear seat back stop to wheelhouse)	62292-3
Bracket (rear seat cushion torque bar inner and outer to floor)	606A40-2	Cover (rear seat back stop to wheelhouse)	631A05
Bracket (rear seat frame front)-to floor	617C88	Cover (rear seat cushion panel)	60966-7
Bracket assy. (rear seat back center arm rest panel)-to floor	67328	Cover set (cargo floor complete)	60925
		Extension (rear seat back center arm rest panel)	67132
		Frame (rear seat back)-upper	613A04
		Grille assy. (rear seat back radio speaker)	601A40

INDEX

SEAT - REAR - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Handle (rear seat back stop loop)	61099	Pin (rear seat cushion pivot)	63036
Handle assy. (rear seat back latch)	62418-9	Plate (rear seat back ornament mounting)	64825
Hinge (rear seat back center arm rest flap lower)	67302	Plate (rear seat cushion torque bar inner bracket anchor)	606A44
Hinge (rear seat back center arm rest flap upper)	67277	Plate (rear seat front anchor)	605A40
Hinge assy. (rear seat back center arm rest)	67300	Plate assy. (rear seat back stop anchor)	61328-9
Kit (rear seat belt mounting adapter)	61156	Reinforcement (rear seat back center arm rest flap)	67254
Loop (rear seat back floor extension stop)-upper	605A48	Reinforcement assy. (rear seat belt anchor to floor pan)	61216
Loop (rear seat back stop)	61099	Retainer (rear seat back button & strap)	63520
Moulding assy. (rear seat back side)	601A54-5	Retainer (rear seat back radio speaker grille mounting)	60184-5
Moulding assy. (rear seat back upper)	61040-1	Retainer assy. (rear seat back medallion)	25666
Moulding (rear seat back top)	61138-9	Riser (rear seat at tunnel opening)	605A86
Ornament (rear seat back)	66649	Riser (right rear seat cushion floor panel support)	60692
Pad (rear seat back moulding)	606A08	Riser assy. (left rear seat cushion support)	60669
Pad (rear seat center arm rest filler)	64824	Rod (rear seat back latch handle)	61332
Pad (rear seat cushion upper)	04541	Roller (rear seat back floor extension panel)	61312
Pad assy. (rear seat back center arm rest)	668A14	Seal (rear seat back finish panel to package tray)	60796
Pad assy. (rear seat cushion lower)	63840	Spring (rear seat back center arm rest)	67234
Panel (folding rear seat back strainer finish)	67248	Spring (rear seat back latch handle)	61097-8
Panel (folding rear seat back strainer finish center)	60747	Spring assy. (rear seat back)	66700
Panel (rear seat back center arm rest)	60718-9	Spring assy. (rear seat cushion)	63120
Panel (rear seat back floor extension finish)	60700	Stop assy. (rear seat back)	61062-3
Panel assy. (left rear seat support)	60706	Strainer (rear seat back support to belt rail)	62426-7
Panel ass'y. (rear seat back)	60512-3	Strainer (rear seat back support to wheelhouse)	46840-1
Panel ass'y. (rear seat back floor)	60724-5	Striker (rear seat back latch)	46838-9
Panel ass'y. (rear seat back floor extension)-less cover		Support (rear seat back rear to floor)	62440-1
Panel ass'y. (rear seat back spring support)		Support (rear seat back side moulding)	62416
Panel ass'y. (rear seat back to package tray finish)		Support (rear seat back stop)	62454-5
Panel ass'y. (rear seat cushion)		Support ass'y. (rear seat back)	62286-7
Panel ass'y. (rear seat support)		Support assy. (rear seat back floor)	62332
		Support assy. (rear seat cushion)	605A50-1
			60352-3

TOP - FOLDING

Base assy. (main pivot support)	50140-1	Bushing (folding top control link to side rail)	50474
Bezel (top control knob)	506A44-5	Bushing (folding top lower power link pivot)	506A66
Bezel (top control knob)-inner & outer	15677	Bushing (folding top main control)-rear	50487
Binding (top and belt rail)	10852-3	Bushing (folding top power link to side rail)	50472
Bolt (folding top side link)	17108	Bushing (folding top rear side rail to power cylinder)	50412
Bow assy. (folding top)-No. 2	50618	Bushing (folding top side front link)	506A78
Bow assy. (folding top)-No. 3	51274	Bushing (folding top upper power link pivot)	506A64
Bow assy. (rear)-No. 4	51269	Bushing (main pivot bracket)-folding top	50473
Brace (folding top main pivot bracket support)	51278	Clamp assy. (folding top hold down)-front	50508
Bracket (balance link adjusting)	53152-3	Connector (folding top inverted male)-hydraulic lift	50719
Bracket (folding top main pivot support to wheelhouse)-inner & outer	50478-9	Cover (folding top balance link)	53996
Bracket (folding top No. 2 bow)	501A28-31	Deflector (folding top rear rail water)	53988-9
Bracket (folding top)-No. 3 bow	514A30	Dowel (folding top No. 1 bow)-end	03458-9
Bracket (main pivot body folding top)	53144-5	Extension (balance link to face)	514A38
Bracket (top lift to floor)	53118-9	Extension assy. (folding top main pivot bracket)	50136
Bracket ass'y. (balance link lower pivot)	50804-5	Grommet (folding top lift hydraulic pump mounting)	531A18
Bracket ass'y. (folding top lift)	50450-1	Header ass'y. (folding top)	50763
Bracket assy. (folding top lift solenoid)	50668	Hose assy. (folding top hydraulic lift)	53038
Bumper assy. (folding top hold down clamp lever)	50644-5	Hose assy. (folding top hydraulic lift)-upper & lower	53456
Bumper assy. (folding top side arm stop)	50524	Lift assy. (folding top)	53390-3
Bushing (balance link to base extension)	29986	Link (folding top)	50600-1
Bushing (folding top balance link to center side rail)	50614	Link (folding top balance)	50454-5
Bushing (folding top center rail)	50636	Link (folding top balance)-lower	506A14-5
	50471	Link (folding top balance to extension)	506A68-9
		Link (folding top power)-upper	50370-1

INDEX

TOP - FOLDING - continued

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
Link ass'y. (control)	50316-7	Retainer (folding top No. 4 bow zipper)	52542
Link assy. (folding top power)-lower	50356-7	Retainer assy. (folding top lift to floor bracket)	50816
Loop (footman)	54810	Retainer assy. (folding top quarter pad case)	52884
Motor and plate assy. (folding top hydraulic lift pump)-Kit	533A00	Screw (balance link adjusting)	50491
Motor and plate assy. (folding top hydraulic lift pump) S(76A)	53357	Seal (folding top compartment opening)	546A02
Pin (folding top balance link extension)	507A20	Seal (folding top header windshield)	03045
Pin (folding top balance link to center side rail)	506A76	Strip assy. (back belt rail tacking)-center	41745
Pin (folding top center side rail)-front	50492	Strip assy. (belt side front tacking)	41772-3
Pin (folding top control link)	50345	Strip assy. (belt side rear tacking)	41782-3
Plate (folding top No. 1 bow scuff)	50153	Support (folding top back curtain window)	52592-3
Plate assy. (folding top hold down rear clamp finish)	514A32-3	Support (folding top main pivot bracket)	53158-9
Plate assy. (folding top hold down side clamp latch)	50552-3	Support (folding top main pivot bracket to wheelhouse)	53088-9
Plate ass'y (folding top main pivot bracket support)	50530-1	Support (folding top main pivot support base)	53004-5
Pump assy. (folding top hydraulic lift)	53084-5	Support assy. (folding top lift)	506A58
Rail (folding top front side)	53104-5	Support ass'y. (top main pivot bracket)	53156-7
Rail (folding top rear side)	53138-9	Tip (folding top rear bow or belt rail binding)	514A00-1
Rail (folding top rear side intermediate)	514A02-3	Top assy. (stack)-folding-less trim	53000
Rail and reinforcement assy. (folding top rear side)	53192-3	Washer (folding top balance link to center side rail)	506A74
Rail assy. (folding top center side)	51154-5	Washer (spring)-three wave-folding top slat irons	53210-7
Rail assy. (pillar)-folding top	53196-7	Weatherstrip (folding top No. 1 bow)-front	51338
Rail assy. (rear side folding top)	51154-5	Weatherstrip (folding top No. 1 bow)-rear	514A28
Reservoir assy. (folding top hydraulic lift)	53376	Weatherstrip (roof side rail)-upper	51325
Retainer (folding top bow listing)	50156	Weatherstrip assy. (folding top intermediate front rail)	53928-9
Retainer (folding top compartment trim)-center	54677	Weatherstrip ass'y. (folding top No. 1 bow or hard top header)-inner	51330
Retainer (folding top compartment trim)-front	54624-5	Weatherstrip assy. (folding top side intermediate rear rail)	53900-1
Retainer (folding top No. 1 bow rear weatherstrip)	51352-3	Weatherstrip assy. (folding top side rail)-center	54002-3
Retainer(folding top No. 1 bow rear weatherstrip)-end	514A26-7	Weatherstrip assy. (folding top side rail)-front	51564-5
	54704-5	Weatherstrip assy. (folding top side rail)-rear	51562-3
		Weatherstrip assy. (folding top side rail)-rear	51566-7
		Weatherstrip assy. (side intermediate rear rail)	54000-1
		Window (folding top)	51624-5
		Window (folding top back curtain)	50054
			53200

WINDSHIELD

Arm (visor)	04110	Moulding(windshield outside upper corner joint)	03080-1
Arm and bracket assy. (visor)-less visor	04144-5	Moulding assy. (windshield garnish side)	03512-3
Bracket(visor clip mounting)	04132	Panel assy. (windshield header)	03408
Bracket (windshield defroster mounting)	01420-1	Pin (visor anchor)	04114
Bracket assy. (visor clip mounting)	04131	Plate (windshield header dowel striker)	03474
Clip ass'y. (visor arm)	04131	Retainer (windshield)	03262-4
Cover (windshield garnish lower moulding joint)	04132	Retainer (windshield hold down)	03850
Cover (windshield outside top moulding joint)	03086	Retainer (windshield outside top and side moulding)	03178
Dowel (windshield header)-side-76	03152-3	Seal (windshield garnish side moulding)	03266
Filler (windshield garnish moulding)-lower corner	03458-9	Seal (windshield hinge)	03828
Glass assy. (windshield)	03642	Sleeve (inside visor anchor pin)	04115
Kit (safety visor & arm & bracket)	03100	Spacer assy. (windshield outside moulding)	03516-7
Moulding (windshield garnish)-lower	04100	Spring (visor arm clip)	04134
Moulding (windshield garnish)-side	03626-7	Support (visor arm clip)	04002
Moulding (windshield garnish)-upper	03598-9	Support(windshield lower garnish moulding)	03638
Moulding (windshield garnish)-upper corner	03606-7	Tip (inside visor anchor pin)	04115
Moulding (windshield)-outside-belt	03492-3	Visor arm and bracket assy. (less visor)	04144
Moulding (windshield)-outside-lower corner	03148-9	Visor assy. (less arm and bracket)	04104
Moulding (windshield)-outside-side	03128-9	Weatherstrip (windshield upper garnish moulding)	03198
Moulding (windshield outside side)-upper	03136-7	Weatherstrip assy. (windshield)	03110
Moulding (windshield)-outside-top	03192-3	Windshield glass assy.	03100
Moulding (windshield outside upper corner)	03144-5	Welt assy. (windshield finish strip)	03127
	03220-1		