

N1024-A

Fig. 7 - Switch Locations

1. Raise the car approximately 10 inches by placing a floor jack under the rear crossmember.

2. From the underside of each wheelhouse, remove each deck lid lock retaining screw (Fig. 9).

3. After lifting the front edge of the deck lid about one inch, operate the top control switch to complete the opening of the deck lid.


**Opening Deck Lid Manually.** If the deck lid hydraulic cylinders fail to operate, the deck lid can be manually opened as follows:

1. Unlock the deck lid by operating the top control switch or by using the above procedure.

2. Loosen the two straps supporting the fuel tank, and lower the tank approximately one inch. It is not necessary to remove the straps or the tank.


3. From underneath the lower back panel, remove both of the deck cylinder retaining screws from each side (Fig. 10).

4. Complete the opening of the deck lid manually. If the deck lid locks have been released from the

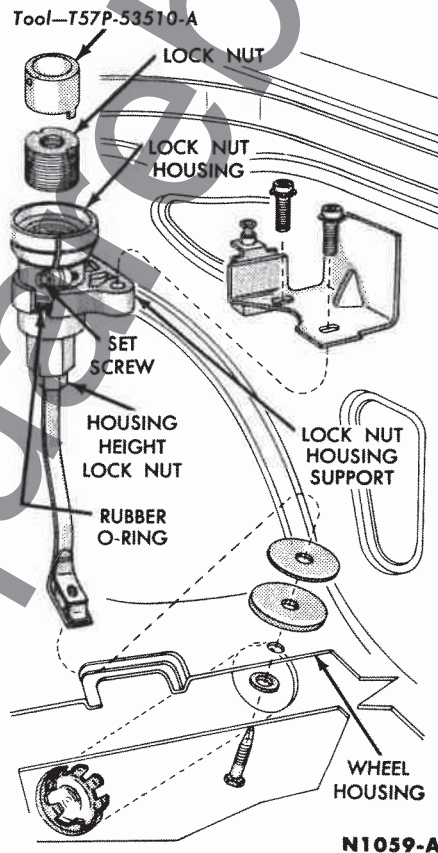

N1059-A

Fig. 9 - Deck Lid Lock Screws

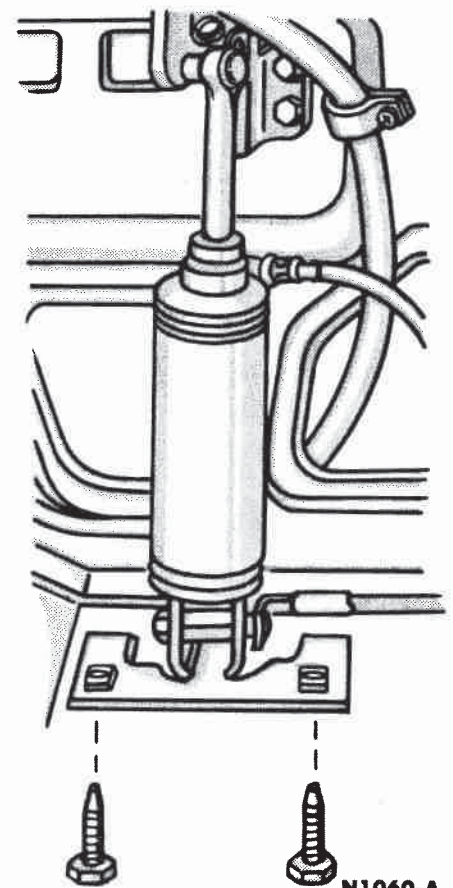

N1060-A

Fig. 10 - Deck Cylinder Retaining Screws