

# SLIDING ROOF PANEL REPLACEMENT


When performing the following operations, refer to Figs. 11 and 12.

## Removal

1. Unlock the sliding roof and slide it rearward approximately 3 inches.
2. Remove the lock handle and cup.
3. Remove the right and left hand front slide track corners by removing the four retaining screws (Fig. 11).
4. Pry the front edge of the headliner loose from the sliding roof panel.
5. Remove the headliner by carefully sliding it forward and over the front edge of the opening.
6. Move the sliding roof panel to the fully closed position.
7. Remove the eight retaining screws from the front sliders and rear slider assembly and remove the roof panel.
8. Move the rear slider assembly forward and lift it out.


## Installation

1. Position the rear slide assembly in the upper slot of the slide rails and slide it to the rearward position.
2. Position and center the roof panel in the opening.
3. Install the four retaining screws, securing the rear slider assembly to the roof panel.
4. Position the front sliders in the upper slot of the slide rails and install the four retaining screws finger tight.
5. Adjust the height of the forward roof panel edge by turning the adjusting collars so that the sliding roof panel is even with the roof top. Move the sliders outward to prevent excessive sidewise movement. Tighten the four retaining screws.
6. Adjust the height of the rear roof panel edge by turning the adjusting links so that the roof panel

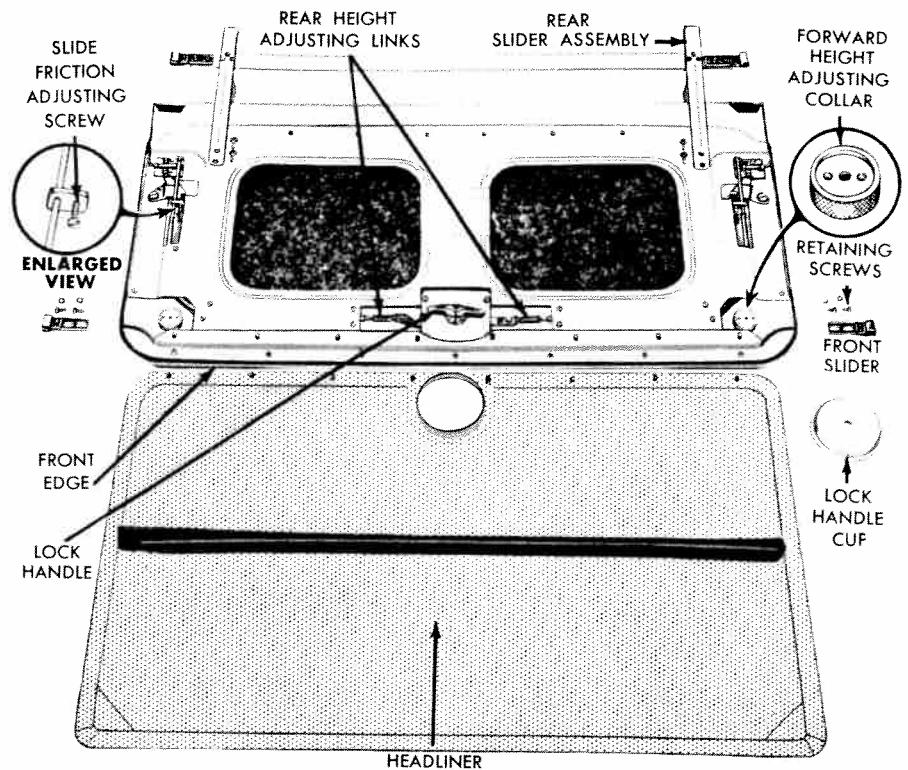

N1091-A

Fig. 12 - Sliding Roof Panel and Headliner

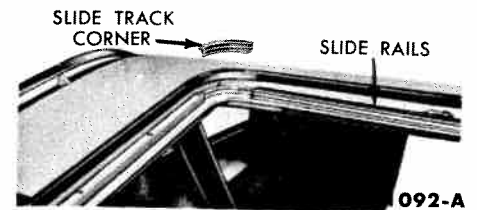

092-A

Fig. 11 - Sliding Roof Panel Track and Corner

is even with the roof top in the locked position.

7. Adjust the two slide friction adjusting screws (Fig. 12), so that the panel will remain in any position when the lock handle is turned.

8. Install the headliner by carefully sliding it into the lower slot of the slide rails.

9. Snap the headliner clips in place and install the lock handle cup and handle.

10. Install both front slide track corners with the four retaining screws.

11. Close and lock the sliding roof.