

MAINTENANCE SCHEDULE

GROUP 19

THOUSANDS OF MILES OR NUMBER OF MONTHS, WHICHEVER OCCURS FIRST (Except Where Noted)	As Required	6	12	18	24	30	36
--	-------------	---	----	----	----	----	----

ENGINE

Change engine oil and filter**		X	X	X	X	X	X	
Check engine oil level		At Fuel Stops						
Adjust carburetor—idle speed, idle mixture, and fast (cold) idle speed	X							
Clean carburetor air cleaner and filter (paper type)		X	X	X	X	X		
Replace carburetor air cleaner filter	Paper†						X	
	Plastic†		X		X		X	
Clean crankcase oil filler breather cap**		X	X	X	X	X	X	
Check engine accessory drive belts	X							
Clean positive crankcase ventilation system and replace valve**				X			X	
Check ignition timing and adjust as required			X		X		X	
Check distributor points	X							
Check spark plugs	X							
Replace fuel filter							X	
Adjust accelerator pump lever			Seasonal					
Replace engine coolant							X*	
Check engine coolant level	X							

TRANSMISSION

Adjust Cruise-O-Matic transmission bands	Rear	X					
	Front						X
Check transmission fluid level		X	X	X	X	X	X

CHASSIS

Inspect and cross-switch wheels and tires	X						
Check power steering reservoir fluid level		X	X	X	X	X	X
Check brake master cylinder fluid level		X	X	X	X	X	X
Check rear axle fluid level		X	X	X	X	X	X
Check steering gear over-center mesh load	X						
Clean and pack front wheel bearings as required						X†	
Check brake lines and lining						X	
Check air conditioning system		Annually at Beginning of A/C Season					
Check front wheel alignment and linkage	X						
Check tire pressures	X						
Check battery fluid level	X						

BODY

Lubricate hood latch	X						
Lubricate hood auxiliary catch	X						
Lubricate door lock cylinders	X						
Lubricate luggage compartment lock cylinder	X						
Lubricate fuel filler door hinges	X						
Check convertible top operation	X						
Check convertible top fluid level	X						
Replace windshield wiper blades	X						
Lubricate door hinge and hinge check	X						
Lubricate hood hinge pivots	X						
Lubricate luggage compartment hinge pivots	X						

*or every two years †at mileage interval only

**On engine items, more frequent intervals will be required if the vehicle is operated in extremely dusty areas, for extended periods of idling or short runs which prevent the engine from reaching normal operating temperatures.