

1965 THUNDERBIRD SHOP MANUAL

INDEX



	Page		Page
A			
AIR CLEANER		Cleaning	17-11
Cleaning and Inspection	10-25	Front End Structure Repair	17-7
Description and Operation	10-25	Hoisting and Jacking	17-5
Removal and Installation	10-25	Leaks and Sealer Application	17-1
		Maintenance	17-11
		Panel Repair	17-6
AIR CONDITIONING		BRAKES	
Belt Replacement	16-18	Adjustments	
Charging, Evacuating and Discharging System	16-12	Common	2-4
Cleaning and Inspection	16-18	In-Car	2-12
Clutch Replacement	16-18	Cleaning and Inspection	2-6
Compressor		Description and Operation	2-7
Crankshaft Seal Replacement	16-16	Diagnosis and Testing	2-1
Oil Level Check	16-13	Front Hub and Rotor Replacement	3-34
Removal and Installation	16-15	Removal and Installation	2-18
Valve Plate Replacement	16-16	Repair	2-21
Description and Operation	16-6	Specifications	2-26
Diagnosis	16-8	BREAKER POINTS	
Evaporator Core Removal and Installation	16-14	Adjustment	9-14
Pressure Checking	16-10	Maintenance	9-17
Specifications	16-29	Tests	9-7
Testing	16-8	BUMPER	
ALTERNATOR		Removal and Installation	
Belt Adjustment	13-7	Front	17-14
Cleaning and Inspection	13-7	Rear	17-14
Description and Operation	13-8		
Diagnosis and Testing	13-1	C	
Regulator and Circuit Testing	13-3	CAMSHAFT	
Removal and Installation	13-8	Bearing Replacement	8-40
Repair	13-8	Cleaning and Inspection	8-15
Specifications	13-13	Lobe Lift Checking	8-7
AXLE		Rear Bearing Bore Plug Replacement	8-32
Axle Shaft Replacement	4-10	Removal and Installation	8-31
Cleaning and Inspection	4-6	Repair	8-10
Description and Operation	4-9	Specifications	8-46
Diagnosis and Testing	4-1	CARBURETOR	
Differential Carrier		Adjustments	
Removal and Installation	4-11	Bench	10-6
Repair	4-13	In-Car	10-16
Drive Pinion and Ring Gear Adjustments	4-4	Cleaning and Inspection	10-9
Drive Pinion Oil Seal Replacement	4-11	Description and Operation	10-11
Housing Removal and Installation	4-12	Diagnosis and Testing	10-2
Rear Wheel Bearing Replacement	4-10	Disassembly and Assembly	10-18
Specifications	4-20	Removal and Installation	10-18
		Repair	
		In-Car	10-16
		Major	10-18
		Specifications	10-28
		CLOCK	
		Description and Operation	15-13
		Replacement	15-17
		COMPRESSION TEST—ENGINE	8-8
		CONDENSER	9-19
		CONNECTING RODS	
		Cleaning and Inspection	8-15
		Disassembly and Assembly	8-35
		Removal and Installation	8-34
		Specifications	8-46
B			
BATTERY			
Charging	13-6		
Specifications	13-13		
Tests	13-5		
BELT ADJUSTMENT			
Air Conditioner	16-18		
Alternator	13-7		
Power Steering	3-20		
Water Pump	11-2		
BODY			
Alignment	17-6		

	Page		Page
CONNECTING ROD BEARINGS		Specifications	9-25
Cleaning and Inspection	8-16	Tests	9-11
Replacement	8-33		
Specifications	8-46	DOOR	
CONVERTIBLE TOP		Alignment	17-17
Adjustments	18-42	Lock	
Description and Operation	18-19	Cylinder Replacement	17-22
Diagnosis and Testing	18-21	Lock Replacement	17-22
Emergency Procedures	18-41	Remote Control Replacement	17-22
Removal and Installation	18-48	Striker Adjustment	17-18
		Outside Handle Replacement	17-22
		Replacement	17-21
COOLING SYSTEM		DRIVE SHAFT AND UNIVERSAL JOINTS	
Cleaning and Inspection	11-3	Description and Operation	5-1
Common Adjustments and Repairs	11-2	Replacement	5-2
Diagnosis	11-1	Trouble Diagnosis	5-1
Maintenance	11-2		
Specifications	11-9		
Testing	11-2		
CRANKSHAFT			
Cleaning and Inspection	8-15	E	
Main Bearing Replacement	8-33	ENGINE	
Removal and Installation	8-39	Adjustments and Repairs – In-Car	8-22
Repair	8-11	Cleaning and Inspection	8-13
Specifications	8-46	Description and Operation	8-18
CYLINDER BLOCK		Diagnosis	8-1
Cleaning and Inspection	8-16	Disassembly and Assembly	8-41
Repair	8-12	Major Repair Operations	8-39
Specifications	8-47	Removal and Installation	8-37
CYLINDER FRONT COVER		Specifications	8-45
Crankshaft Front Oil Seal Replacement ...	8-30	Supports	8-22
Removal and Installation	8-39	Testing	8-7
CYLINDER HEAD		EXHAUST SYSTEM	
Cleaning and Inspection	8-13	Description	12-1
Disassembly and Assembly	8-27	In-Car Adjustments and Repairs	12-1
Removal and Installation	8-27	Removal and Installation	12-4
Repair	8-10	Specifications	12-5
Specifications	8-45		
D			
DECK LID		FAN DRIVE CLUTCH	
Alignment	17-21	Cleaning and Inspection	11-3
Hinge and Torsion Bar Replacement	17-28	Description and Operation	11-8
Lock		Major Repair Operation	11-8
Lock Cylinder Replacement	17-28	Removal and Installation	11-8
Lock Replacement	17-28	Specifications	11-9
Striker Plate Adjustment	17-21	Testing	11-2
Replacement	17-28	FAN REPLACEMENT	11-3
DISTRIBUTOR		FLYWHEEL REPLACEMENT	8-35
Breaker Point	9-13	FUEL FILTER REPLACEMENT	10-26
Cleaning and Inspection	9-16	FUEL LINE REPLACEMENT	10-30
Common Adjustments and Repairs	9-14	FUEL PUMP	
Description and Operation	9-19	Cleaning and Inspection	10-10
Disassembly		Description and Operation	10-26
Bench	9-22	Diagnosis and Testing	10-1
In-Car	9-19	Disassembly and Assembly	10-27
Major Repair Operations	9-22	Major Repair Operations	10-27
Removal and Installation	9-21	Removal and Installation	10-26
		Specifications	10-31
		FUEL SYSTEM	
		Common Adjustments and Repairs	10-6
		Diagnosis and Testing	10-1
		Specifications	10-31
		FUEL TANK REPLACEMENT	10-28
		FUEL TANK FILLER PIPE REPLACEMENT	10-28

	Page		Page
G		Headlights	
GRILLE		Alignment	15-5
Replacement	17-14	Description	15-5
H		Switches	
HEATER		Description	15-9
Adjustments	16-3	Replacement	15-9
Description and Operation	16-1	Testing	15-3
Diagnosis	16-2	LUBRICATION	21-1
Removal and Installation	16-4	M	
Specifications	16-29	MAIN BEARINGS	
Testing	16-3	Cleaning and Inspection	8-16
HOOD AND HOOD LOCK		Replacement	8-33
Adjustments	17-12	Specifications	8-46
Removal and Installation	17-12	MAINTENANCE	
HORN		Operations	20-1
Adjustment	15-4	Schedule	19-1
Description	15-5	MANIFOLDS	
Diagnosis	15-2	Cleaning and Inspection	8-13
Horn Buttons Replacement	15-8	Exhaust Manifold Replacement	8-26
Replacement	15-8	Intake Manifold Replacement	8-25
Testing	15-3	Intake Vacuum Test	8-7
HYDRAULIC VALVE LIFTER		MIRROR	
Cleaning and Inspection	8-14	Inside Bonded Mirror Replacement	17-26
Disassembly and Assembly	8-32	Remote Control Outside	17-16
Replacement	8-32	MOULDINGS	
Tests	8-8	Body Exterior	17-16
I		O	
IGNITION SWITCH REPLACEMENT	15-10	OIL PAN	
IGNITION SYSTEM		Cleaning and Inspection	8-16
Diagnosis	9-1	Removal and Inspection	8-36
Specifications	9-25	OIL PUMP	
Testing	9-1	Cleaning and Inspection	8-17
Timing	9-7	Disassembly and Assembly	8-37
INSTRUMENTS		Removal and Installation	8-36
Constant Voltage Regulator		Specifications	8-47
Replacement	15-14	P	
Testing	15-3	PAINT REPAIR	17-7
Description and Operation	15-12	PISTON	
Diagnosis	15-1	Cleaning and Inspection	8-15
Removal and Installation	15-13	Repairs	8-11
Replacement		Specifications	8-46
Charge Indicator	15-15	PISTON AND CONNECTING ROD ASSEMBLY	
Fuel Gauge Units	15-14	Disassembly and Assembly	8-35
Oil Pressure Gauge Units	15-14	Removal and Installation	8-34
Temperature Gauge Units	15-14	PISTON PIN	
INTERIOR TRIM		Cleaning and Inspection	8-15
Door Trim Panel Replacement	18-1	Repairs	8-12
Headlining Replacement	18-1	Specifications	8-46
Instrument Panel Pad Replacement	18-2	PISTON RINGS	
Quarter Trim Panel Replacement	18-1	Cleaning and Inspection	8-15
L		Repairs	8-12
LANDAU TOP REPLACEMENT	18-7	Specifications	8-46
LIGHTS		POSITIVE CRANKCASE VENTILATION SYSTEM	
Bulb Replacement	15-7	Cleaning and Inspection	8-17
Diagnosis	15-1	Removal and Installation	8-27

	Page		Page
POWER STEERING		Repair	14-7
Air Bleeding	3-1	Specifications	14-9
Diagnosis and Testing	3-1	Testing	14-3
Pump		STEERING	
Description and Operation	3-18	Column	
Removal and Installation	3-22	Adjustments	3-21
Specifications	3-36	Description	3-20
PUSH RODS		Upper Bearing Replacement	3-22
Inspection	8-13	Diagnosis and Testing	3-1
Repair	8-10	Gear	
		Adjustments	3-20
R		Description and Operation	3-17
RADIATOR		Removal and Installation	3-21
Cleaning and Inspection	11-3	Repair	3-26
Description and Operation	11-6	Specifications	3-35
Maintenance	11-2	Steering Wheel	
Hose Replacement	11-3	Replacement	3-22
Removal and Installation	11-6	Spoke Position Adjustment	3-6
RADIATOR SUPPLY TANK		Wheel Alignment	3-4
Description and Operation	11-6	SUSPENSION	
Removal and Installation	11-7	Ball Joint Replacement	
RADIO		Lower	3-15
Antenna Replacement	16-26	Upper	3-9
Description	16-25	Control Arm	
Push Button Adjustment	16-25	Overhaul	3-15
Removal and Installation	16-26	Replacement	3-12
Speaker Replacement	16-28	Description and Operation	3-8
Specifications	16-29	Diagnosis and Testing	3-1
REGULATOR — ALTERNATOR		Cleaning and Inspection	3-6
Adjustment	13-11	Shock Absorber Replacement	
Description and Operation	13-11	Front	3-10
Removal and Installation	13-12	Rear	3-14
Specifications	13-13	Specifications	3-35
		Spindle Replacement	3-10
S		Springs	
SPARK PLUGS	9-16	Overhaul Rear	3-16
SPARK PLUG WIRE REPLACEMENT	9-15	Replacement — Front	3-11
SPEED CONTROL		Replacement — Rear	3-14
Adjustment	16-23	Wheel Alignment	3-4
Cleaning and Inspection	16-24		
Description and Operation	16-19	T	
Diagnosis	16-22	THERMOSTAT	
Replacements	16-24	Description and Operation	11-6
Specifications	16-29	Removal and Installation	11-7
Testing	16-22	Specifications	11-9
SPEEDOMETER		Test	11-2
Cable Replacement	15-17	TIMING CHAIN AND SPROCKETS	
Description and Operation	15-13	Cleaning and Inspection	8-14
Replacement	15-17	Removal and Installation	8-29
Tests	15-4	TIRES	
STARTER		Diagnosis and Testing	3-3
Armature Replacement	14-6	Replacement	3-32
Brush Replacement	14-5	Specifications	3-36
Cleaning and Inspection	14-6	TRANSMISSION	
Description and Operation	14-7	Adjustments	
Diagnosis	14-1	Front Band	7-23
Drive Replacement	14-5	Linkage	7-22
Removal and Installation	14-7	Neutral Switch	7-23
		Rear Band	7-24

	Page		Page
Assembly	7-36	Repair	8-9
Case and Linkage Repair	7-36	Specifications	8-45
Cleaning and Inspection	7-10		
Control Valve		VALVE SPRING, RETAINER AND STEM SEAL	
Replacement	7-25	REPLACEMENT	8-28
Sub-Assembly Repair	7-33		
Converter Replacement	7-27	VENTILATION	
Description and Operation	7-15	Adjustment	
Diagnosis and Testing	7-1	Cowl Air	16-3
Diagnosis Guide	7-8	Rear Vent	16-3
Disassembly	7-28	Description and Operation	16-1
Extension Housing Bushing and Rear			
Seal Replacement	7-26		
Fluid		W	
Drain and Refill	7-9	WATER PUMP	
Level Check	7-9	Description and Operation	11-5
Front Clutch Sub-Assembly Repair	7-31	Removal and Installation	11-5
Front Pump Sub-Assembly Repair	7-32	Specifications	11-9
Front Servo		WHEELS	
Replacement	7-25	Alignment	3-4
Sub-Assembly Repair	7-35	Bearing	
Gear Ratios	7-17	Adjustment	3-31
Governor		Packing	3-32
Replacement	7-24	Description and Operation	3-31
Sub-Assembly Repair	7-35	Front Wheel Grease	
Oil Cooler Flushing	7-9	Seal Replacement	3-32
Parking Pawl Replacement	7-26	Inspection	3-7
Pressure Regulator		Removal and Installation	3-32
Replacement	7-25	Specifications	3-36
Sub-Assembly Repair	7-32		
Rear Clutch Sub-Assembly Repair	7-30	WINDOWS	
Rear Pump Sub-Assembly Repair	7-32	Adjustments	
Rear Servo		Door and Vent	17-18
Replacement	7-25	Quarter	17-19
Sub-Assembly Repair	7-35	Back Window Replacement	17-27
Removal and Installation	7-27	Door Window Regulator Replacement	17-23
Shift Tube and Lever Replacement	3-23	Door Window Replacement	17-23
Specifications	7-40	Power Window	
		Diagnosis	17-17
TURN INDICATOR		Motor Replacement	17-24
Description and Operation	15-13	Regulator Replacement	17-24
Diagnosis	15-2	Quarter Window and Regulator	
Flasher Replacement	15-16	Replacement	17-23
Relay Replacement	15-16	Vent Window Replacement	17-22
Switch Replacement	15-15	Windshield Replacement	17-24
		WINDSHIELD WASHER	
V		Description and Operation	15-13
VALVE			
Adjustment	8-9	WIPERS	
Cleaning and Inspection	8-13	Adjustment	15-4
Clearance	8-9	Blade Adjustment	15-13
Repair	8-10	Control Replacement	15-18
Specifications	8-45	Description and Operation	15-13
		Diagnosis	15-2
VALVE ROCKER ARM SHAFT ASSEMBLY		Motor Replacement	15-18
Cleaning and Inspection	8-13	Pivot Shaft and Link Assembly	
Disassembly and Assembly	8-24	Replacement	15-18
Removal and Installation	8-23		