

A



 
 
 
 
**Marsh PUBLICATION**

DETROIT, MICHIGAN






# Fordomatic\* Transmission


## SERVICE MANUAL

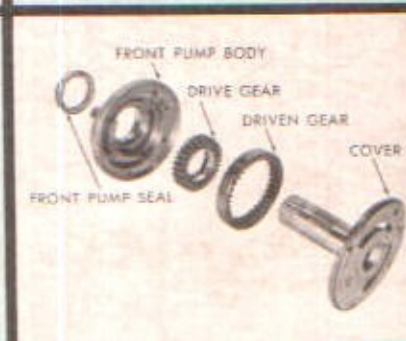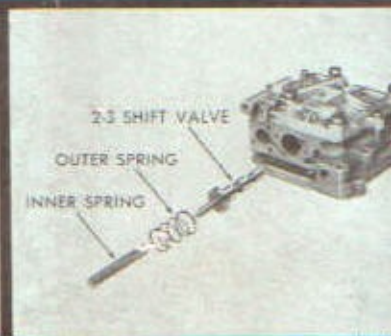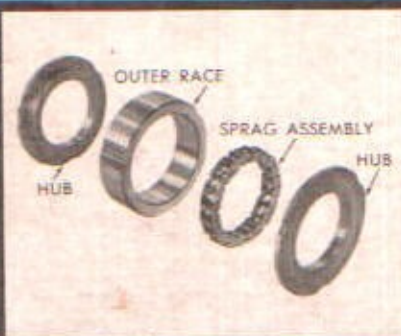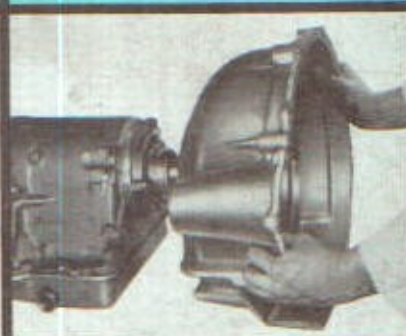

   **\*Also Covers  
Merc-O-Matic  
and Lincoln  
Turbo-Drive**

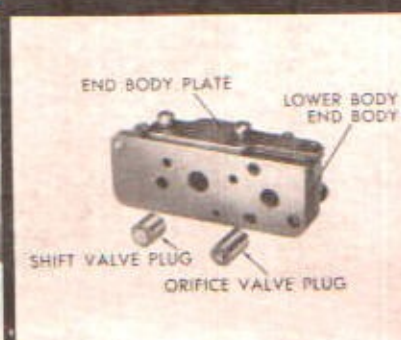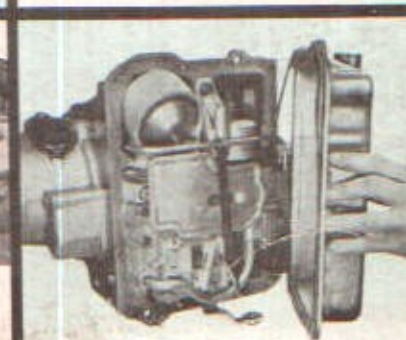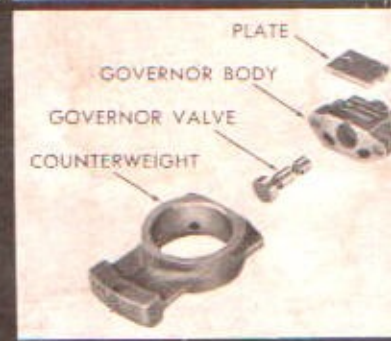

# FORDOMATIC SERVICE MANUAL

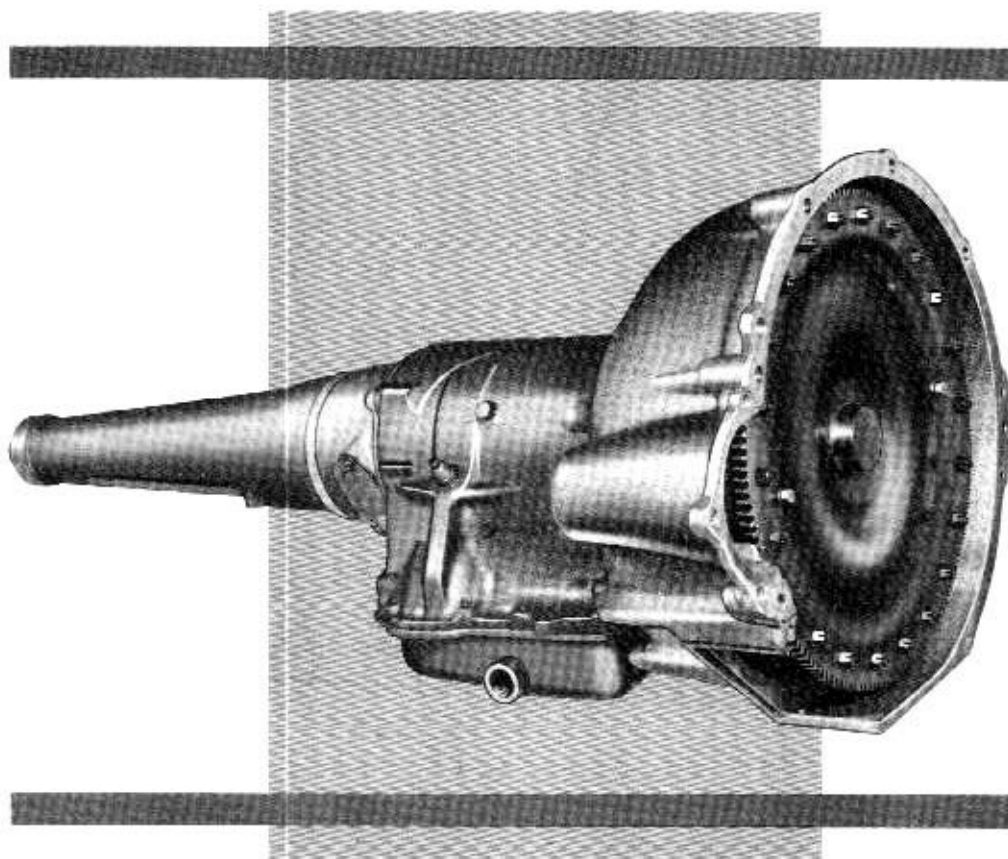 

This manual covers a basic type of automatic transmission used in Ford Motor Company products. In Ford, it is called the Fordomatic; in Mercury, the Merc-O-Matic; in Lincoln, the Turbo-Drive.


MANUAL NUMBER **FM 1002**

SELLING PRICE **\$4<sup>50</sup>**

Copyright 1957 • Paul-Marsh Company  
520 West Fort Street, Detroit 26, Michigan




# ABOUT THIS MANUAL

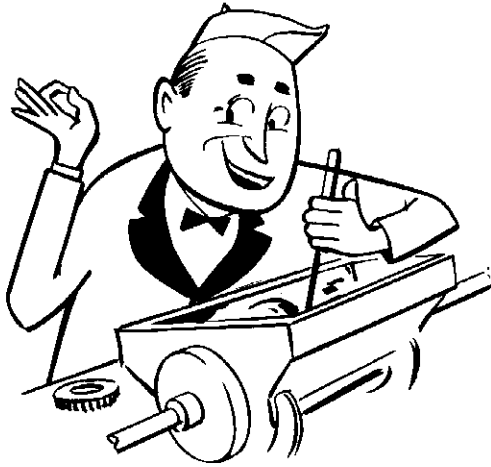 

## IT'S COMPLETE

This manual is designed to provide everything that has to be known and done to service satisfactorily the Fordomatic, Merc-O-Matic and Turbo-Drive transmissions. This includes:

 1. Fundamentals of operation.
2. Diagnosis.
3. On-the-car service.
4. Total overhaul.
5. Parts, Special Tools, and Flat rate data.

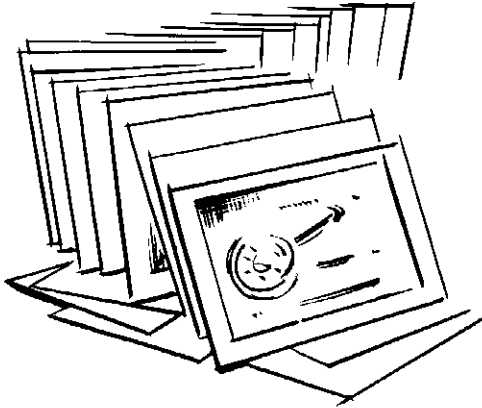

## IT'S A PICTURE STORY

Every operation is pictured to eliminate any confusion and to make clear immediately what is described by the copy. In fact, it is a complete picture-story of more than 400 pictures and drawings.

## IT'S FOR MECHANICS ONLY

This is a practical handbook for any mechanic to use in his daily work. It contains the tricks of the trade that make the job easier, faster and better. The information and procedures are complete, up-to-date, and have been developed under the direction of specialists who have provided a perfect blend of engineering and practical overhaul experience. In addition all the operations have been checked and tried out by mechanics to insure accuracy and practicality.



## IT PROVIDES QUALITY CONTROL

Especial care has been taken to insure that work is done right the first time. For example, in final assembly of the transmission there are many tests made as individual units are assembled and installed in the case. Thus if there are malfunctions, they can be corrected without extensive teardown which would be required if no checks were made until the transmission was completely assembled. This assures better workmanship, and saves time. Special tools are also important in doing quality work and in saving time. In some cases, work cannot be done without them. But, in many others, they assure that work will be done right, fast and with no damage to parts. Thus, costly comebacks are eliminated, greater customer confidence is built, and better customer relations are developed.



## IT'S AN INTRODUCTION TO AN OPPORTUNITY

This manual is your introduction to an opportunity to tap the rich service business represented by the millions of Fordomatic, Merc-O-Matic and Turbo-Drive transmissions which have been manufactured and sold. And it's a rapidly expanding market -- because every month tens of thousands of these transmissions are "hitting the road."

What's more, once you have the right service information -- and this manual provides it for you -- you can tap this source of business with only a small investment in time and money. Fordomatic service breaks into two major categories -- on-the-car services and overhaul.

On-the-car services represent about 75% of all Fordomatic, Merc-O-Matic and Turbo-Drive service required. However, the remaining 25% -- major overhaul -- represents the greatest dollar volume potential. Whether you get into on-the-car services only -- or whether you go on into overhaul -- the possibilities are vast. So why pass them up -- especially since this manual gives you all the information you need to get going and keep going.



# TABLE OF CONTENTS

Page

## Chapter I

### FUNDAMENTALS OF OPERATION

SECTION ONE	GENERAL INFORMATION . . . . .	1
SECTION TWO	TORQUE CONVERTER . . . . .	3
	A. Torque Multiplication . . . . .	3
	B. Torque Converter Cooling System . . . . .	5
SECTION THREE	PLANETARY GEAR SYSTEM . . . . .	6
SECTION FOUR	CONTROL SYSTEM . . . . .	12
	A. General Information . . . . .	12
	B. Components of Hydraulic Control System . . . . .	16
	C. Hydraulic Pressures . . . . .	21
	D. Basic Hydraulic Circuits . . . . .	27
SECTION FIVE	HOW TO OPERATE THE TRANSMISSION . . . . .	48

## Chapter II

### TROUBLE-SHOOTING AND DIAGNOSIS

SECTION ONE	PRE-DIAGNOSIS STEPS . . . . .	51
	A. Preliminary Checks and Adjustments . . . . .	51
SECTION TWO	DIAGNOSIS . . . . .	56
	A. Stall Test . . . . .	56
	B. Road Test . . . . .	57
	C. Fluid Pressure Test . . . . .	58
	D. Fluid Pressure Test Interpretation . . . . .	59
	E. Air Pressure Checks . . . . .	61
	F. Trouble Shooting Chart . . . . .	64

## Chapter III

### ON-THE-CAR SERVICES

SECTION ONE	PERIODIC SERVICES . . . . .	77
	A. Linkage and Band Service . . . . .	77
	B. Draining and Refilling Transmission . . . . .	77
SECTION TWO	LINKAGE ADJUSTMENTS . . . . .	78
	A. Manual Linkage Adjustments . . . . .	78
	B. Starter Neutral Switch Adjustment . . . . .	79
	C. Manual Selector Cable Adjustment (1957 Mercury only) . . . . .	80
	D. Park Cable Adjustment (1957 Mercury only) . . . . .	80
	E. Throttle Linkage Adjustments . . . . .	81
	F. Throttle Linkage Adjustment for the Ford-6 . . . . .	82

# TABLE OF CONTENTS

Page

## Chapter III

### ON-THE-CAR SERVICES (continued)

#### SECTION TWO

LINKAGE ADJUSTMENTS (Continued)	
G. Throttle Linkage Adjustment for the Ford V-8.	84
H. Throttle Linkage Adjustment for the Mercury .	87
I. Throttle Linkage Adjustment - Made with Tachometer and Pressure Gage . . . . .	89

#### SECTION THREE

BAND ADJUSTMENTS . . . . .	90
A. Front Band Adjustment . . . . .	90
B. Rear Band Adjustment . . . . .	92

#### SECTION FOUR

ON-THE-CAR UNIT REPLACEMENTS . . . . .	93
A. Extension Housing Rear Seal and Bushing Replacement . . . . .	93
B. Replacement of Throttle and Manual Control Levers . . . . .	94
C. Replacement of Control Valve Body . . . . .	95
D. Replacement of Front Servo . . . . .	96
E. Replacement of Rear Servo . . . . .	98
F. Replacement of Pressure Regulator . . . . .	99
G. Replacement of Governor . . . . .	100

## Chapter IV

### TOTAL OVERHAUL

#### SECTION ONE

REMOVAL OF TRANSMISSION AND CONVERTER FROM CAR . . . . .	103
-------------------------------------------------------------	-----

#### SECTION TWO

STRIPPING THE CASE . . . . .	105
A. Removal of Converter from Transmission . . .	105
B. Removal of Oil Pan, Fluid Screen and Tubes . .	106
C. Removal of Pressure Regulator . . . . .	106
D. Removal of Control Valve Assembly and the Front and Rear Servos . . . . .	107
E. Checking Transmission End Play and Removal of Front Pump . . . . .	108
F. Removal of Extension Housing, Fluid Distributor and Governor . . . . .	110
G. Removal of Rear Pump and Pinion Carrier . . .	111
H. Removal and Separation of Clutches and Primary Sun Gear Assembly . . . . .	113
I. Removal of Transmission Case Linkage . . . .	115

# TABLE OF CONTENTS

Page

## Chapter IV

## TOTAL OVERHAUL (continued)

SECTION THREE	INSPECTION OF CASE, INSPECTION OF CASE LINKAGE, AND INSTALLATION OF CASE LINKAGE . . . . .	118
	A. Inspection of Case . . . . .	118
	B. Inspection of Case Linkage . . . . .	119
	C. Installation of Case Linkage in Case . . . . .	119
SECTION FOUR	INSPECTION OF DISTRIBUTOR AND SLEEVE, PINION CARRIER, PRIMARY SUN GEAR SHAFT, AND REAR EXTENSION HOUSING . . . . .	122
	A. Inspection of Fluid Distributor and Distributor Sleeve . . . . .	122
	B. Inspection of Pinion Carrier . . . . .	122
	C. Inspection of Primary Sun Gear Shaft . . . . .	123
	D. Inspection of Output Shaft . . . . .	123
	E. Inspection and Repair of Rear Extension Housing . . . . .	124
SECTION FIVE	DISASSEMBLY, INSPECTION AND ASSEMBLY OF REAR CLUTCH . . . . .	124
	A. Disassembly of Rear Clutch . . . . .	124
	B. Inspection of Rear Clutch . . . . .	126
	C. Assembly of the Rear Clutch . . . . .	127
SECTION SIX	DISASSEMBLY, INSPECTION, ASSEMBLY OF THE FRONT CLUTCH, AND INSTALLATION OF FRONT AND REAR CLUTCHES IN THE TRANSMISSION CASE . . . . .	128
	A. Disassembly of the Front Clutch . . . . .	128
	B. Inspection of the Front Clutch . . . . .	130
	C. Installation of Rear Clutch on Primary Sun Gear Shaft and Assembly of Front Clutch . . . . .	131
	D. Installation of Clutches in Transmission Case . . . . .	134
SECTION SEVEN	DISASSEMBLY, INSPECTION, ASSEMBLY, AND INSTALLATION OF REAR PUMP . . . . .	135
	A. Disassembly of Rear Pump . . . . .	135
	B. Inspection of Rear Pump . . . . .	135
	C. Assembly of Rear Pump . . . . .	136
	D. Installation of Pinion Carrier, Output Shaft, and Rear Pump in Case . . . . .	136

# TABLE OF CONTENTS

Page

## Chapter IV

## TOTAL OVERHAUL (continued)

### SECTION EIGHT

DISASSEMBLY, INSPECTION, ASSEMBLY, AND INSTALLATION OF GOVERNOR AND INSTAL- LATION OF DISTRIBUTOR, REAR EXTENSION HOUSING, AND REAR PUMP DISCHARGE TUBE	138
A. Disassembly of Governor . . . . .	138
B. Inspection of Governor . . . . .	139
C. Assembly of Governor . . . . .	139
D. Installation of Governor, Fluid Distributor, Rear Housing, and Rear Pump Discharge Tube . . . . .	139

### SECTION NINE

DISASSEMBLY, INSPECTION, INSTALLATION OF FRONT PUMP, AND CHECKING SHAFT END PLAY . . . . .	141
A. Disassembly of Front Pump . . . . .	141
B. Inspection of Front Pump . . . . .	141
C. Assembly of Front Pump . . . . .	142
D. Installation of Front Pump and Checking Shaft End Play . . . . .	142

### SECTION TEN

DISASSEMBLY, INSPECTION, ASSEMBLY AND INSTALLATION OF REAR SERVO . . . . .	143
A. Disassembly of Rear Servo . . . . .	143
B. Inspection of Rear Servo . . . . .	144
C. Assembly of Rear Servo . . . . .	144
D. Installation of Rear Servo . . . . .	145

### SECTION ELEVEN

DISASSEMBLY, INSPECTION, ASSEMBLY, INSTALLATION OF FRONT SERVO, AND ADJUSTMENT OF BANDS . . . . .	145
A. Disassembly of Front Servo . . . . .	145
B. Inspection of Front Servo . . . . .	146
C. Assembly of Front Servo . . . . .	146
D. Installation of Front Servo . . . . .	147

### SECTION TWELVE

DISASSEMBLY, INSPECTION, ASSEMBLY, AND INSTALLATION OF PRESSURE REGULATOR . .	148
A. Disassembly of Pressure Regulator . . . . .	148
B. Inspection of Pressure Regulator . . . . .	148
C. Assembly of Pressure Regulator . . . . .	148
D. Installation of Pressure Regulator . . . . .	149



# TABLE OF CONTENTS

Page

Chapter IV

**TOTAL OVERHAUL (continued)**

SECTION  
THIRTEEN

DISASSEMBLY, INSPECTION, ASSEMBLY, AND  
INSTALLATION OF CONTROL VALVE BODY,  
AND INSTALLATION OF FLUID SCREEN AND  
BOTTOM PAN . . . . . 149

A. Disassembly of Control Valve (For 1955-1957  
Models) . . . . . 150

B. Inspection of Control Valve (All Models) . . . . . 153

C. Assembly of Control Valve (For 1955-1957  
Models) . . . . . 154

D. Installation of Control Valve, Adjustment of  
Bands, Air Check of Servos, and Instal-  
lation of Screen and Pan . . . . . 159

SECTION  
FOURTEEN

DISASSEMBLY, INSPECTION, ASSEMBLY, AND  
INSTALLATION OF CONVERTER . . . . . 162

A. Disassembly of Converter . . . . . 162

B. Inspection of Converter . . . . . 164

C. Assembly of Converter . . . . . 165

D. Installation of Converter on Transmission . . . . . 169

SECTION  
FIFTEEN

INSTALLATION OF TRANSMISSION AND  
CONVERTER IN CAR AND FINAL OPERATIONS . . . . . 169

APPENDIX I . . . . . 173

APPENDIX II . . . . . 176

APPENDIX III . . . . . 180