




## PROPORTIONING VALVE (PV2 & PV4)

### Proportioning Valve Plumbing

The most common proportioning valve plumbing is shown below. An alternative plumbing method is to plug off the top front line and have the bottom front line go to a "T" fitting. From the "T" fitting, the front lines are then split off to the left and right calipers.

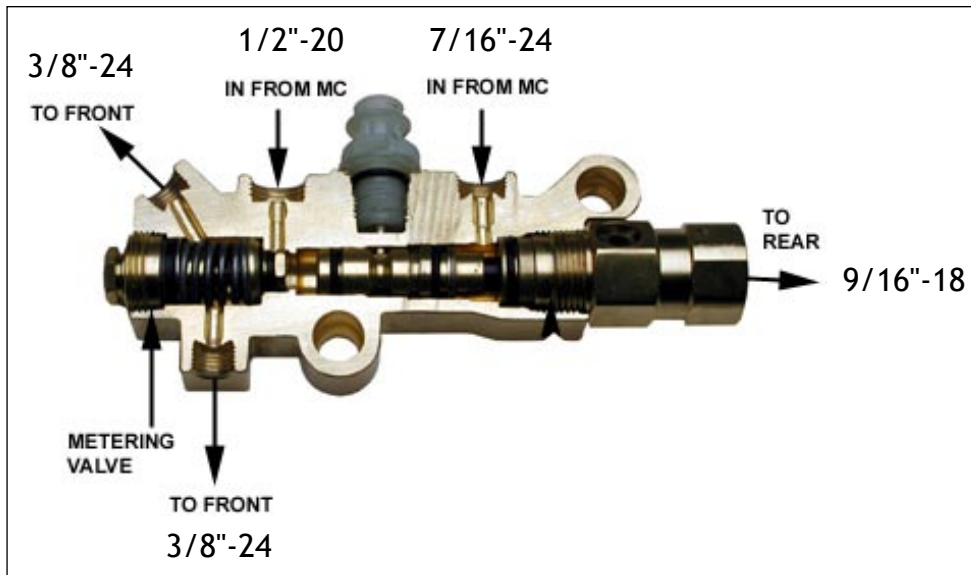

### Proportioning Valve Kit Build Sheet

1. Proportioning Valve
2. Brake Warning Light
3. Proportioning Valve Lines (2)
4. Proportioning Valve Bracket
5. Proportioning Valve Hardware

### **Warning!**

To insure proper function these steps must be completed:

1. Lines must be replaced with new lines.
2. Lines must use 45° flare.
3. Lines must be 1/4" line.

